



# NQuire 750 Stingray micro kiosk user guide

### Disclaimer

© 2020 Newland Auto-ID Tech. Co., Ltd. All rights reserved.

Please read through the manual carefully before using the product and operate it according to the manual. It is advised that you should keep this manual for future reference.

Do not disassemble the device or remove the seal label from the device, doing so will void the product warranty provided by Newland Auto-ID Tech. Co., Ltd.

All pictures in this manual are for reference only and actual product may differ. Regarding the product modification and update, Newland Auto-ID Tech. Co., Ltd. reserves the right to make changes to any software or hardware to improve reliability, function, or design at any time without notice. The information contained herein is subject to change without prior notice.

The products depicted in this manual may include software copyrighted by Newland Auto-ID Tech. Co., Ltd or third party. The user, corporation or individual, shall not duplicate, in whole or in part, distribute, modify, decompile, disassemble, decode, reverse engineer, rent, transfer or sublicense such software without prior written consent from the copyright holders.

This manual is copyrighted. No part of this publication may be reproduced, distributed, or used in any form without written permission from Newland.

#### **Risk Warning Regarding Unauthorized System Updates:**

You should use the Newland-provided tool to update this product's system. Modifying system files through installing a third-party ROM system or using any cracking method may result in product malfunction or data loss and this will void your warranty.

Newland Auto-ID Tech. Co., Ltd. reserves the right to make final interpretation of the statement above.

Newland Auto-ID Tech. Co., Ltd. No.1, Rujiang West Rd., Mawei, Fuzhou, Fujian, China 350015 http://www.newlandaidc.com

## **Revision History**

Version	Description	Date
V1.0	Initial release.	Dec. 10th, 2019
V1.1	Update with PN and file format	June.24th 2020

## **Table of Content**

Chapter 1 Device Instruction&Installation	1
Hardware Instruction	
1. LED Indicator	
2. SD/SIM Card Slot/Cover	
3/4/5.Key	
6. Front Camera	
7. Expansion Slots & Add-on modules	
8. Speaker	5
9. Vesa Mount Holes	5
10. DC-In Jack	
11. Barcode Scanner	
12. Control I/O Ports & Cover	
13/14/15. Generic I/O Ports	
16. Power Switch	
Chapter 2 Accessory & Installation	
VESA Wall Mount	
Chapter 3 Feature Programming	
Home Screen	
Change wallpaper	
Add Widgets	
System Bar	
Navigation Buttons	
Status Notifications	
Applications	
Language & Input Method	
Date & Time	
Volume	
Brightness	
Schedule Power On/Off	
Wi-Fi	
Ethernet	
Bluetooth	
Virtual Keyboard	
Take Photos	
Surf Online	
Play Media	
Install & Uninstall Apps	
Install Apps	

Uninstall Apps	
Reset to Factory Default	
	-
Chapter 4 Important Safety and Handling Information	

## Chapter 1 Device Instruction&Installation

### **Hardware Instruction**





#### **Bottom**



- 1. LED Indicator
- 2. SD Card Slot / Cover:
- 3. Exit Key:
- 4. Up / Down Key:
- 5. Vol+ / Vol- Key:
- 6. Front Camera:
- 7. Expansion Slot:
- 8. Speakers:
- 9. VESA75 Mounting Holes:
- 10. DC-In Jack:
- 11. Barcode Scanner:
- 12. Control I/O Port Cover:
- 13. 10/100Mbps Ethernet Port:
- 14. USB Host Port:
- 15. Micro-USB OTG Port:
- 16. Power Switch:
- dual audio output max. screw depth 4.5mm from mounting surface powered by 12V/2A DC input 2D barcode scanner to scan barcode cover for GPIO and RS-232 ports t: RJ45 connector supporting Ethernet connection support USB 2.0 Host type A

support external SD card

return to the previous page

adjust the system volume

embedded 5M pixels

navigate up/down to select an item

install optional add-on modules

G Port: USB 2.0, Micro-USB type B jack, OTG switch power ON/OFF

### **Hardware Instruction & Operations**

(Installation & Uninstallation)

### 1. LED Indicator

Green	Power supply is on.
Light Off	Power supply is off.



#### 2. SD/SIM Card Slot/Cover

Support external SD card up to 128GB.

#### INSTALLATION:

- 1) Release the screw on SD/SIM card cover.
- 2) Remove SD/SIM card cover.
- 3) Insert SD/SIM card into the push-push SD/SIM card slot.



#### **REMOVAL:**

- 1) Push SD/SIM card inside the slot, release press force suddenly to let SD/SIM card popped out from the slot.
- 2) Insert cover and fix it by screw.

#### 3/4/5.Key



### 6. Front Camera

It is a build-in camera with 5 mega-pixel.



### 7. Expansion Slots & Add-on modules

For add-on modules like RFID and MSR,4G-TLE.



#### ADD-ON MODULES



#### INSTALLATION

- 1) Align the positioning bumps on module with the pits on main device and gently press down until they are fully inserted.
- 2) Fix module on main device by screws.





### 8. Speaker

Dual audio output.



Speaker

### 9. Vesa Mount Holes





#### 10. DC-In Jack

Plug the power adapter into the power jack.







Plug with Power adapter

#### 11. Barcode Scanner

Barcode engine is set up in auto mode as default setting. LED will light up when any object shows in front of barcode scanner within proper distance, and barcode engine will automatically scan when a barcode showed within proper distance.





#### 12. Control I/O Ports & Cover

There are control IO ports (RS-232 & GPIO) under the Control IO cover (#12 in Device Instruction). Loosen and remove screw to release the cover. Then take out the cover.



RS-232 port pinout (PIN1-PIN6): GND, RX, TX, GND, 5V, 5V.





**GPIO** port pinout (PIN1-PIN8): INPU\_VOD (GPIO0\_31), INPU\_VOC (GPIO0\_30), VOB\_OUT (GPIO0\_29), VOA\_OUT (GPIO0\_15), INPUT\_GND, INPUT\_GND, N/A, INPUT\_VCC\_In.

The NQuire can be connected to devices, such as LED lamp, door lock or access control system via its GPIO port.

#### Call the NQuire's GPIO control API: Reference

Nq750\_interface\_api.jar and then import com.android.nq750.NQManager in your code.

#### Introduction to the NQManager class:



API	Description	Parameters	Type of Return Value	Return Value
setdoorThreshold (String value)	Set GPIO pin state	<b>150</b> : Set VOA_OUT (GPIO0_15) to high <b>151</b> : Set VOA_OUT (GPIO0_15) to low <b>290</b> : Set VOB_OUT (GPIO0_29) to high <b>291</b> : Set VOB_OUT (GPIO0_29) to low <b>1011</b> : Enable UART <b>1010</b> : Disable UART	boolean	true: success false: failure
getdoorData()	Read the state of INPU_VOC (GPIO0_30) and INPU_VOD (GPIO0_31)	Null	String	00: GPIO0_30 high, GPIO0_31 high 01: GPIO0_30 high, GPIO0_31 low 10: GPIO0_30 low, GPIO0_31 high 11: GPIO0_30 low, GPIO0_31 low

#### GPO circuit example:



#### **GPI circuit example:**



#### **Control logics:**

NET NAME	CONDITION	RESULT	REMARK
INPU_VOC	INPU_VOC=IPUT_VCC_In	GPIO0_30=L	INPUT
	INPU_VOC=IPUT_GND	GPIO0_30=H	
INPU_VOD	INPU_VOD=IPUT_VCC_In	GPIO0_31=L	
	INPU_VOD=IPUT_GND	GPIO0_31=H	
VOA_OUT	GPIO0_15=H	VOA_OUT=IPUT_GND	OUTPUT
	GPIO0_15=L	VOA_OUT=IPUT_VCC_In	
VOB_OUT	GPIO0_29=H	VOB_OUT=IPUT_GND	
	GPIO0_29=L	VOB_OUT=IPUT_VCC_In	

#### **Electrical requirements:**

 $12V \le IPUT_VCC_In / INPU_VOC / INPU_VOD \le 24V$ 

#### 13/14/15. Generic I/O Ports



Type A USB Port

Micro USB Port

RJ45

### 16. Power Switch

- 1) Switch on to boot up device.
- 2) By default, power switch is in **ON** position.



## Chapter 2 Accessory & Installation

### **VESA Wall Mount**

Installation & Operation

1. Select a mounting location that is convenient for operation.

2. Remove the screw attaching the bracket to the chassis of the VESA 75 mount.

3. For wall mounting, install the four plastic wall anchors in a wall and then secure the bracket of VESA 75 mount to the wall using the four large screws. For countertop/shelf mounting, secure the bracket of VESA 75 mount to a countertop/shelf using the four large screws.

4. Complete all wire/cable connections to the NQuire.Secure the chassis of VESA 75 mount to the back of the NQuire using the four small screws. Note that the depth of screw insertion into the NQuire must not exceed 4.5mm.

5. Attach the bracket back to the chassis with the screw that was removed in step 2.



## Chapter 3 Feature Programming

## **Home Screen**

On the home screen, you can long-tap on any blank area to change the wallpaper or drag widgets to desktop.



### Change wallpaper





#### 2. Tap "Wallpapers".



3. Select the image you want as your wallpaper.



4. Tap "Set wallpaper" on the upper-left corner of the screen then "Home screen" to apply the new wallpaper.

## Add Widgets



		11:51
9	Browser	
	Bookmark 1 × 1 Bookmarks 2 × 2	
	Calendar	
	Calendar 2 × 2 Ke Sep 27 Blac Cookier 5 Made for Grean Manager Ventor Toom machine dom for Serge Sign — Sign BlackPublic Stop machine machine	
<b>\$</b>	Clock	
	Analog clock $2 \times 2$ Digital clock $3 \times 2$ $1 \cap \cdot \cap \otimes$	

2. Long-tap on a widget and drag it to desktop.

-					* 💎 6:2
QG	oogle				
				6.00	
				O.ZZ TUE, MAR 13	
	Contacts				
		<u>@</u>	0	0	
-	Q	⊲	0		

3. If you want to remove an icon, long-tap on the widget and then drag it onto "X Remove" at the top of the screen.



## System Bar

#### **Navigation Buttons**

Ø	$\triangleleft$	0	D	D)	<b>O</b>
1	2	3	4	5	6

- **1. Volume-:** Decrease the system volume.
- 2. Back: Return to the previous page.
- **3.** Home: Return to the home screen.
- 4. Recents: Switch between recently used apps.



To remove an app from the list, swipe the app item left or right or tap "X" in the upper-right corner of the app window to remove it.

- 5. Volume+: Increase the system volume.
- 6. Screenshot: Take a screenshot.

Status bar at the top of the screen displays system status, such as time, Wi-Fi, SIM card and USB connection, etc.

\* 💎 7:14



Pull down the status bar to open the shortcuts window which contains brightness adjustment, Wi-Fi, no SIM card, do not disturb, landscape, bluetooth, airplane mode, physical button and invert colors, and system settings entrance.



Pull down the status bar to open the status window.

## Applications

E N					2:5
		Q Sear	ch Apps		
۲		- × + =		<b>S</b>	
Apkinstaller	Browser	Calculator	Calendar	Camera	Clock
8	2	<u>e</u>		۲	
Contacts	Downloads	Email	Gallery	Music	NLScanDemo
	Q	Ó		► <sub>4K</sub>	
Quick Setting	Search	Settings	System Update	Video	

Tap  $\land$  above the app shortcuts on the home screen to view the App list.

The installed applications will be shown here and you can open an app by tapping its icon. To find an app easily, you can create a shortcut by long-taping on the icon and dragging it into the home screen.



## Language & Input Method



**Change language:** Tap **"Language**" then **"Add a language**", and then you can change the system language according to your preference.

Enable an input method: Tap "Virtual keyboard" then "Manage keyboards", and then enable the desired input method.

							4:01
÷	Manage ke	yboards					
		Android Keyboard (AC English (US)				-0	
		Japanese IME Japanese					
		Ð	$\bigtriangledown$	0			

## Date & Time

Automatic date & time Use network-provided time	•
Automatic time zone Use network-provided time zone	•
Set date December 5, 2019	
Set time 4:31 PM	
Select time zone GMT+08:00 China Standard Time	
Use 24-hour format 1:00 PM	()

If the "Automatic date & time" option is enabled, system date and time will be synchronized automatically with network time when you connect your device to a Wi-Fi network.

To set the time manually, you need to disable "Automatic date & time"& Automatic time zone.

Automatic date & time Use network-provided time			
Automatic time zone Use network-provided time :	zone		
Set date December 5, 2019			
Set time 4:34 PM			
Select time zone GMT+08:00 China Standard	Time		
Use 24-hour format 1:00 PM			

Besides, you can also set time zone and time format as per your needs.

## Volume

On the system bar, click the Volume- icon it to decrease the system volume, and click the

**Volume+** icon to increase the system volume.

Or you can press the Vol+/Vol-keys (#5 in Device Instruction) on the top of the device to adjust the volume.

## Brightness



In the App list, tap "Settings" to open the system settings app, and select "Display". Tap "Brightness level" and then move the brightness slider to the left to decrease the brightness and right to increase it.

				* 💎 5:11
≡ <sub>Display</sub>		¢	-	
Brightness level				
Adaptive brightness Optimize brightness level for available light				
Wallpaper				
Screen saver				
Font size Default				
Display size Default				
When device is rotated Rotate the contents of the screen				
Cast				
Q	$\bigtriangledown$	0	$\Box$	<b>T</b>
Ð	$\triangleleft$	0		<u>``</u>

If you want the brightness to be adjusted automatically based on ambient lighting, enable the "Adaptive brightness" option.

## Schedule Power On/Off

This function is used to power the device on and off automatically at a specific time each day. In the App list, tap "Settings" to open the system settings app, and select "Time Screen".

				* 💎 1:38
Schedule power c	on & off			
☞ 7:00				
<b>8:30</b>				
Ô	$\bigtriangledown$	0		<u>``</u>

The top row is for power on clock, and the following row is for power off clock. To enter the power on/off clock settings, tap the corresponding row.

<b>→</b>				* 💎 6:35
Set schedule power o	n			REVERT DONE
Time				
7:00 AM				
Ð	$\triangleleft$	0		<u>ت</u>

Tap "Time". Then set the time and tap "OK".

Set schedule power on Time 7:00 AM	-			<b>% ⊽ 7:28</b> REVERT DONE
		8:30 AM PM	55 00 05 50 10 45 15 40 20 35 30 25 CANCEL OK	
Q	⊲	0		ē

Tap "DONE" at the upper-right corner of the screen to save the setting.

et schedule power on				¥ ♥ 7:3 REVERT DONE
<b>Time</b> 8:30 AM				
D)	$\bigtriangledown$	0	<b>D</b>	

## Wi-Fi

Join a Wi-Fi network: In App list, tap "Settings" to open system settings app, and select "Wi-Fi". Turn Wi-Fi on to find available Wi-Fi networks. Select a network and enter the password, then tap "CONNECT".

-																				♡ 7:57
=	Wi-F			r															×	<b>X</b> E
	On				TP-L Passw		5BE1	AA												
<b>V</b> a	fr2.4	G																		
	LieBa	aoWiFi38	84		🗌 Sh	ow pas	sword													
•	AUSI	ER-20171	1031JC		Advan	ced opt	tions								~					
<b>V</b> .	DIRE	CT-QrDE	SKTOP-	QME9					_				CANCEL	L COI	INECT					
-																				
q	1	W	2	е	3	r	4	t	5	у	6	u	7	i	8	0	9	р	0	×
	а		S		d		f		g		h		j		k		Ι		V	
4	-	z		Х		С		V		b		n		m		ļ		?		*
?1:	23	,		$\oplus$							Engli	sh								٢
		Ĵ			$\nabla$				0									0		1

## Ethernet

Be sure to turn off Wi-Fi if you want to connect your device to the Internet through Ethernet. Plug the Ethernet cable into your device's Ethernet port (#13 in Device Instruction).

In the App list, tap "Settings" to open the system settings app, and select "More". Tap "Ethernet".

V9					⇔⊽ 8:45
← Ethernet					
IP address 192.168.74.18					
netmask 255.255.255.0					
<b>gateway</b> 192.168.74.254					
<b>dns1</b> 192.168.30.4					
<b>dns2</b> 192.168.30.1					
Ethernet Ip mode					
D)	$\bigtriangledown$	0		<u>[0]</u>	

If you want to specify a static IP address for your device, tap "**Ethernet Ip mode**" then "**static**", and enter the IP address, gateway, netmask and DNS server. Tap "**CONNECT**".

						<↔>♡ 8:46
← Ethernet						
IP address 192.168.74.18						
netmask 255.255.255.0						
gateway	Ethe	ernet Ip mode				
192.168.74.254	0	static				
dns1 192.168.30.4	۲	dhcp				
dns2	0	pppoe				
192.168.30.1				CANCEL		
Ethernet Ip mode dhcp						
Ď	$\triangleleft$		0		<u>ō-</u>	

## Bluetooth

You can set up a Bluetooth connection between the device and other Bluetooth devices, such as PC, mobile phone. Note that Bluetooth connection works better if there are no obstacles between them.

**Pair your device to a Bluetooth device:** In the App list, tap "**Settings**" to open the system settings app, and select "**Bluetooth**". Turn Bluetooth on to search for available Bluetooth devices. Select the desired device from the search results and then tap "**PAIR**".



After pairing, the paired device will be moved to the "Paired Devices" list.

🔺 🧐		* 🛇 6:29
≡	Bluetooth	:
	On	
Paired	d devices	
L.	"Administrator"的 iPhone	\$
Availa	able devices	
L.	Jenny	
*	7A:5B:95:EB:13:24	
L.	OPPO A59st	
L.	mate9	
*	40:1B:85:ED:75:1F	
L.	小米手机	
L.	OPPO R9s	
	¢ d O	

## Virtual Keyboard

The device provides a virtual keyboard for typing. You can use it as a real one.

When you tap a text input field, the virtual keyboard will appear at the bottom of the screen. To close the virtual keyboard, you

Google										
1	2	3	4							
						7	0	0	0	
q	W	e	r	t 5	у 6	7 U	8 İ	9 O	p	×
q	W	е	r	t	У	u	i	0		
			r f	t g	y <sup>°</sup> h		i <sup>8</sup>			<
q	W	е	r	t	У	u	i	0		
q	W S	e d	r f	t g	y h	u j n	i k	0 	р	

can tap  $\mathbf{\nabla}$  in the system bar at the bottom of the screen.

**Change keyboard:** Tap **III** in the lower-right corner of the screen, and then select the desired keyboard from the pop-up window.

										* 🖹 5:16
Webpage not avail	able $ imes$									:
$\leftrightarrow$ $\rightarrow$ C	🔍 🔒 https:	://www.google.	com/webhp?c	client=android-g	google&source	=android-home	2			×
Webpage not										
The webpage at htt net::ERR_INTERNET		-	lient=android-g	oogle&source=ar	ndroid-home cou	uld not be loade	d because:			
INTERNET	_DISCONNECTI									
1	2	3	4	Suggest contac	ct names? Touch 6	n for info. 7	8	9	0	
q	W	e	r	ť	y	u	i	0	р	×
·					-					
а	S	d	f	g	h	j	k	1		$\ominus$
				Ũ		-				
+	Z	х	С	V	b	n	m	!	?	+
										—
?123	/									com
	<b>D</b>		$\bigtriangledown$	0	-	-		0		
	Ĵ		V	0			<b>D</b>	0		

									* 🖹 5:17
	Webpage not avai								
	$\  \   \leftarrow \  \   \rightarrow \  \   {\bf C}$	् 🔒 https:/							EX.
' <del>'</del>									
	Webpage no	t available							
	The webpage at ht	tps://www.google	e.com/webhp?client=android-g	ogle&source=andr	oid-home could not be l	oaded because:			
	net::ERR_INTERNE	T_DISCONNECTE	D						
			Change keyboard						
			Faciliate (UD)						
			Android Keyboard	(AOSP)					
	1	2	Japanese Japanese IME				9	0	×
	q	W	e				5	р	
									-
	а	S	d f	g	h	j k			
	<b></b>	z	х с	v	b n	m	1	?	<b></b>
		-	× 0	•	о п			•	
	?123	/						•	.com
		Ð	$\bigtriangledown$	0		<b>J</b> )	<u>``</u>		

If the keyboard icon is not present in the system bar, go to Settings > Languages & input > Virtual keyboard > Manage keyboards > enable the input method(s) you want to use.

8	考 能 5:47	a	考 眞 5:19
← Virtual keyboard		← Manage keyboards	
Android Keyboard (AOSP) Englini (US)		Android Keyboard (AQSP) English (US)	-0
+ Manage keyboards		Japanese IME Japanese	•

## **Take Photos**

In the App list, tap 💙 to launch the Camera app. Tap 🖸 take a photo.



Tap to open detail settings. From top to bottom in the picture are: grid lines, timer and 3DNR.


## Surf Online

In the App list, tap 🖤 to launch the Browser app.

When connecting the device to a network, you can visit websites, play online media or download files via the browser.

In a browser window, enter a URL into the address bar and tap 🔿 on the virtual keyboard to open the URL. You can also tap

to add new tabs to open multiple webpages

simultaneously in one window.



## Play Media

With the provided apps, you can play your media files on your storage, such as pictures, music, and videos.



Picture Player: Support JPG, BMP, GIF, PNG



Music Player: Support MP2, WMA, WAV, AAC, OGG, ASF.



Video Player: Support MKV, TS, FLV, AVI, VOB, MPG, DAT, ASF, RM, MOV, 3GP, MP4, WMV

# Install & Uninstall Apps

#### **Install Apps**

Before installing an app, please download the app (.apk) to using the browser, or copy a downloaded app (.apk) to the device from your computer.



		Ins	stall		
		Mar	nage		
		E	xit		
¢	4	0		$\Box$	

Open the folder containing the apk file.

⊥ Install		≱ 💗 5:52
Path: /		
Internal Memory	There is no apk file under this directory	
TF Card		
<b>⊅</b>	C) of	

N Install					* 🕷 9:07
Path: Internal Memory	y/Download				
/				Dir	ectory: Internal Memory/Download
<b>.</b>					googlev4.5.2.193126728- armeabi-7a_anfensi.com.apk
	D	$\bigtriangledown$	0		<b>(</b> )

Tap the apk you want to install.



Tap "INSTALL" and then wait for the installation to complete.



You can also download an android app market, and install the apps via the market.

If receiving the "For security, your tablet is set to block installation of apps obtained from unknown sources" message when installing an app, tap "**SETTINGS**" then go to "**Security**", and enable the "**Unknown sources**" option, and then reinstall the app.

NE				* 📉 9:31
Install				
	ᡖ 🛛 Google Pinyir	n Input		
Z /			nory/	Download
<b>.</b>				5.2.193126728- a_anfensi.com.apk
	security, your tablet is set to irces.	block installation of apps obtai	ined from unknown	
			CANCEL SETTINGS	3

				* 💎 6:12
≡ <sub>Security</sub>				
Device security				
Screen lock None				
Encryption				
Encrypt tablet Encrypted				
Passwords				
Make passwords visible				
Device administration				
Device administrators View or deactivate device administrators				$\frown$
Unknown sources Allow installation of apps from unknown so	purces			
Ð	$\bigtriangledown$	0		61

### **Uninstall Apps**

To uninstall an app, Open the Settings app

E N \$ 🛛 9:36 ≡ Apps **\$** : Android Keyboard (AOSP) 120 KB ApkInstaller 12.00 KB • Browser 228 KB Calculator 8.00 KB Calendar 28.00 KB - 5-2 Camera 32.00 KB Clock 64.00 KB com.nl.nlscandemo 12.00 KB Contacts 20.00 KB  $\hat{\Box}$  $\square$ 

in the App list, and select "Apps".

Tap the app you want to remove.

E N	X	\$ 🛛 9:36
÷	App info	
	Google Pinyin Input version 4.5.2.193126728-armeabi+v7a	
	UNINSTALL FORCE STOP	
	Storage 38.05 MB used in internal storage	
	Data usage No data used	
	Permissions No permissions granted	
	Notifications	
	Open by default No defaults set	
	Battery 0% use since last full charge	
	Memory	

Tap the "UNINSTALL" button then "OK", and then wait for the uninstallation to complete.

E N						* 🗏 9:36
← App info						
G	oogle Pinyin Input ersion 4.5.2.193126728-armeabi-v7a					
	UNINSTALL			FORCE STOP		
Storage 38.05 MB used in Internal s	🏭 Google Pinyin Input					
Data usage No data used	Do you want to uninstall this app?					
Permissions No permissions granted	_	_	_	CANCEL OK		
Notifications						
Open by default No defaults set						
Battery 0% use since last full charge						
Memory	h at 0 h ann					
Ŷ					Ō	

# **Reset to Factory Default**

Please make sure to back up the important data before resetting the device.



	ackup & reset					* 💎 10:18
Factory d	ata reset					
	Ð	$\bigtriangledown$	0		<u>o</u>	

#### Tap "Factory data reset".

■ ← Factory data reset					\$ 💎 10:18
This will erase all data from your t	tablet's <b>internal storage</b>	e, including:			
<ul> <li>Your Google account</li> <li>System and app data and setting</li> <li>Downloaded apps</li> <li>Music</li> <li>Photos</li> <li>Other user data</li> </ul>					
		RESET TABLET			
Ĵ	$\triangleleft$	0		Ō	

Tap the "**RESET TABLET**" button.



Tap the "ERASE EVERYTHING" button. Then the device will reboot and reset to factory default.

# Chapter 4 Important Safety and Handling Information

- $\checkmark$  Do not put the product in high temperature, humid or dusty environment.
- $\checkmark$  Do not drop, crash or break down this product.
- $\checkmark$  Do not power off the device when it's formatting or upgrading, otherwise it will cause operation system error.
- ✓ This product is IP54 certified in waterproof and dustproof on front panel (only).
- ✓ Use only approved add-on enhancements.



Newland EMEA HQ +31 (0) 345 87 00 33 info@newland-id.com newland-id.com **D-A-CH** 0049 (0) 6182 82916-16 info@newland-id.de

Benelux +31 (0) 345 87 00 33 benelux@newland-id.com

**Italy** +39 (0) 342 0562227 italy@newland-id.com United Kingdom +44 (0) 7771 631387 sales@newland-id.co.uk

**South Africa** Gauteng: +27 (0) 11 553 8010 Cape Town: +27 (0) 21 9140819 info@newland-id.co.za

**Turkey** +90 (0) 544 538 40 49 turkey@newland-id.com **France** +39 (0) 345 8804096 france@newland-id.com

**Ibérica** +34 (0) 93 303 74 66 info@newland-id.es

Nordic & Baltic +46 (0) 70 88 47 767 nordic@newland-id.com Russia +31 (0) 345 87 00 33 russia@newland-id.com

Middle East +39 (0) 345 8804096 middleeast@newland-id.com