

# ASAP POS

## E80T User Manual

---



Factory Default



Enable all barcodes



Disable all barcodes



Enable all 1D barcodes



Disable all 1D barcodes



Enable all 2D barcodes



Disable all 2D barcodes



Version

### Interfaces:



UTF8 KBW



RS232




USB-KB




USB -Virtual


Sensitivity adjustment (using automatic sensing)

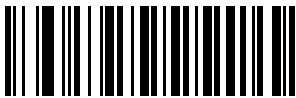

Low

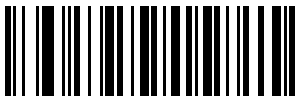


Normal

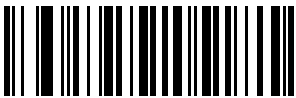


High


Languages:

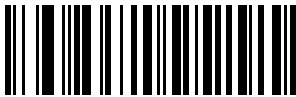

USA

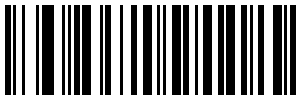

Japan

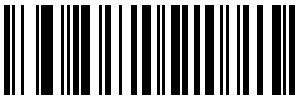

Brazil



Czech



Denmark




Sweden




France



Italy

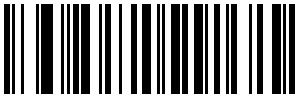

Norway

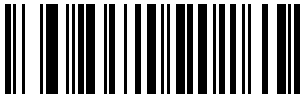

Spain




Snovak




Turkey




England

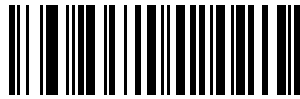

German

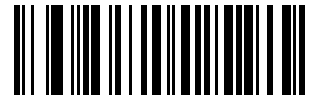

Greece

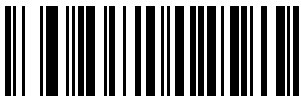

Hungary



Turkey Q



Turkey F



Finland



Russia



Holland

## Caps lock Function:

This function can lock the uppercase key function and keep the letter size unchanged.



Close Caps lock



Open Caps lock

## Number lock Function:

This function can transfer the number keys in the letter area to the small keyboard area, and use the keypad to enter the number keys



Open Numeric Keypad



Close Numeric Keypad

## Shift Function:



Close Shift lock



Open Shift lock

## RS232 Function:

The serial port supports the standard RS-232 interface and can support the TTL-232 standard at the same time. The virtual serial port function is not affected by this setting。

### Bound Rate



RS232 1200 bps



RS232 2400 bps



RS232 4800 bps



RS232 9600 bps



RS232 19200 bps



RS232 38400 bps



RS232 57600 bps



RS232 115200 bps

---

### Check Digit



RS232 no check digit



RS232 Even parity



RS232 Odd parity

### Stop Digit



RS232 1 stop digit



RS232 2 stop digits

### Data Bits



RS232 7 data bits



RS232 8 data bits

## Case conversion:



No Conversion



Convert to uppercase letters



Convert to lowercase letters

## Prompt sound setting:



Close Boot sound



Open Boot sound



Turn off decoded sound



Turn on decoded sound

## Scan delay function:



Single scanning delay



Same reading delay



Close same reading delay



Open same reading delay

## All symbologies:



Disable EAN 128



Enable EAN 128



Disable Code 128



Enable Code 128



Disable EAN 8



Enable EAN 8



Disable ISBN



Enable ISBN



Enable ISSN



Disable ISSN



Disable EAN-13



Enable EAN-13



Disable UPC-E



Enable UPC-E



Disable UPC-A



Enable UPC-A



Disable Interleaved 25



Enable Interleaved 25



Disable Matrix 25



 
Enable Matrix 25




Disable CODE 39



Enable CODE 39



Full ASCII code39

 

Standard code 39



Enable Codabar



Disable codabar



Disable Code 93



Enable Code 93



Disable Industrial 25



Enable Industrial 25



Disable Standard 25



Enable Standard 25



Disable MSI



Enable MSI



Disable QR



Enable QR



Disable PDF417



Enable PDF417



Disable DataMatrix



Enable DataMatrix



Disable Aztec



Enable Aztec



Disable Maxicode



Enable Maxicode

