

2D Barcode Scanner

User Manual

Table Of Contents

Revision History.....	3
Chapter 1Getting Started.....	1
Introduction.....	1
About This Guide.....	2
Connecting EVK to PC.....	2
Barcode Scanning.....	2
Configuring the XL-3956.....	2
Barcode Programming.....	2
Command Programming.....	2
Read Register.....	3
Write Register.....	6
Save Register Data in EEPROM.....	10
Relationship between Programming Command and Serial Command.....	11
Registers.....	13
Programming Barcode Data.....	25
Factory Defaults.....	25
Chapter2 Communication Interface.....	26
TTL232 Interface (for XL-3956).....	26
Baud Rate.....	27
USB Interface (for XL-3956-01).....	27
USB DATAPIPE.....	27
USB HIDKBW.....	28
Standard Keyboard.....	29
Emulate ALT+ Keypad.....	29
Function Key Mapping.....	30
ASCII Function Key Mapping Table.....	31
USB Country Keyboard Types.....	32
Beep on Unknown Character.....	35
InterKeystroke Delay.....	35
Caps Lock.....	36
Convert Case.....	37
Emulate Numeric Keypad.....	38

USB COM Port Emulation.....	39
HID-POS	39
Access the Scanner with Your Program.....	40
Acquire Scanned Data.....	40
VID/PID.....	40
Chapter3 Scan Mode.....	41
Manual Mode.....	41
Continuous Mode.....	42
Decode Session Timeout.....	42
Timeout between Decodes.....	43
Sense Mode.....	44
Decode Session Timeout.....	44
Timeout between Decodes.....	45
Image Stabilization Timeout.....	45
Sensitivity.....	46
Command Trigger Mode.....	47
Decode Session Timeout.....	47
Chapter4 Illumination & Aiming.....	48
Illumination.....	48
Aiming.....	49
Chapter5 Notification.....	50
Mute Mode.....	50
Good Read Beep.....	50
Good Read Beep Frequency.....	51
Good Read Beep Duration.....	51
Decode Result Notification	52
Chapter6 Data Formatting.....	53
AIM ID Prefix.....	53
CODE ID Prefix.....	54
Terminating Character Suffix.....	55
Chapter7 Symbolologies.....	56
General Settings.....	56
Enable/Disable All Symbolologies.....	56

Enable/Disable 1D Symbologies.....	56
Enable/Disable 2D Symbologies.....	56
Video Reverse.....	57
1D Symbologies.....	58
Code 128.....	58
Restore Factory Defaults.....	58
Enable/Disable Code 128.....	58
UCC/EAN128 (GS1-128).....	59
Restore Factory Defaults.....	59
Enable/Disable UCC/EAN128.....	59
AIM 128.....	60
Restore Factory Defaults.....	60
Enable/Disable AIM 128.....	60
EAN-8	61
Restore Factory Defaults.....	61
Enable/Disable EAN-8.....	61
Transmit Check Digit.....	61
Add-On Code.....	62
Add-On Code Required.....	63
EAN-8 Extension.....	63
EAN-13	64
Restore Factory Defaults.....	64
Enable/Disable EAN-13.....	64
Transmit Check Digit.....	64
Add-On Code.....	65
Add-On Code Required.....	66
ISSN.....	67
Restore Factory Defaults.....	67
Enable/Disable ISSN.....	67
ISBN.....	68
Restore Factory Defaults.....	68
Enable/Disable ISBN.....	68
Set ISBN Format.....	68
UPC-E.....	69
Restore Factory Defaults.....	69
Enable/Disable UPC-E.....	69
Transmit Check Digit.....	69

Add-On Code.....	70
Add-On Code Required.....	71
Transmit System Character.....	71
UPC-E Extension.....	71
UPC-A.....	72
Restore Factory Defaults.....	72
Enable/DisableUPC-A.....	72
Transmit Check Digit.....	72
Add-On Code.....	73
Add-On Code Required.....	74
Transmit Preamble Character.....	74
Interleaved 2 of 5.....	75
Restore Factory Defaults.....	75
Enable/DisableInterleaved 2 of 5.....	75
Check Digit Verification.....	76
Transmit Appended "0".....	77
ITF-6	78
ITF-14	79
Matrix 2 of 5.....	80
Restore Factory Defaults.....	80
Enable/DisableMatrix 2 of 5.....	80
Check Digit Verification.....	81
Industrial 25.....	82
Restore Factory Defaults.....	82
Enable/DisableIndustrial 25.....	82
Check Digit Verification.....	83
Standard 25.....	84
Restore Factory Defaults.....	84
Enable/DisableStandard 25.....	84
Check Digit Verification.....	85
Code 39.....	86
Restore Factory Defaults.....	86
Enable/DisableCode 39.....	86
Transmit Start/Stop Character.....	86
Check Digit Verification.....	87
Enable/Disable Code 39 Full ASCII.....	87
Codabar.....	88

Restore Factory Defaults.....	88
Enable/DisableCodabar.....	88
Check Digit Verification.....	89
Transmit Start/Stop Characte.....	89
Start/Stop Character Format.....	90
Code 93.....	91
Restore Factory Defaults.....	91
Enable/DisableCode 93.....	91
Check Digit Verification.....	92
Code 11.....	93
Restore Factory Defaults.....	93
Enable/DisableCode 11.....	93
Check Digit Verification.....	94
Plessey.....	95
Restore Factory Defaults.....	95
Enable/DisablePlessey.....	95
Check Digit Verification.....	96
MSI-Plessey.....	97
Restore Factory Defaults.....	97
Enable/DisableMSI-Plessey.....	97
Check Digit Verification.....	98
RSS -14	99
Restore Factory Defaults.....	99
Enable/DisableRSS -14.....	99
Transmit Application Identifier “01”.....	99
RSS Limited.....	100
Restore Factory Defaults.....	100
Enable/DisableRSS Limited.....	100
Transmit Application Identifier “01”.....	100
RSS Expand.....	101
Restore Factory Defaults.....	101
Enable/DisableRSS Expand.....	101
2D Symbologies.....	102
PDF417.....	102
Restore Factory Defaults.....	102
Enable/DisablePDF417.....	102
Data Matrix.....	103

Restore Factory Defaults.....	103
Enable/DisableData Matrix.....	103
Rectangular Barcodes.....	103
Mirror Images.....	104
QR Code.....	105
Restore Factory Defaults.....	105
Enable/DisableQR Code	105
Micro QR.....	105
Mirrored Micro QR.....	106
Appendix.....	107
Appendix A: Factory Defaults Table.....	107
Appendix B: AIM ID Table.....	113
Appendix C: Code ID Table.....	116
Appendix D: ASCII Table.....	117
Appendix E: Parameter Programming Examples.....	121
Programthe Decode Session Timeout.....	121
Program the Timeout between Decodes.....	121
Program the Image Stabilization Timeout.....	121
Program the Sensitivity Level.....	122
Appendix F: Digit Barcodes.....	123
Appendix G:Save/Cancel Barcodes.....	126
Appendix H: Requested Used Serial Commands.....	127

About This Guide

This guide provides programming instructions for the **XL-3956**. Users can configure the **XL-3956** by scanning the programming barcodes included in this manual.

The **XL-3956** has been properly configured for most applications and can be put into use without further configuration. Users may check the Factory Defaults Table in Appendix for reference. Throughout the manual, options marked with asterisks (*) are factory default values.

Connecting EVK to PC

The EVK tool is provided to assist users in application development for the **XL-3956**. The EVK can be connected to a PC via the RS-232 or USB interface.

Barcode Scanning


Powered by area imaging technology and Newland patented **SUNLUX** technology, the **XL-3956** features fast scanning and accurate decoding. Barcodes rotated at any angle can still be read with ease. When scanning a barcode, simply enter the aiming beam projected by the **XL-3956** over the barcode.

Configuring the **XL-3956**

There are two ways to configure the engine: barcode programming and command programming.

Barcode Programming

The **XL-3956** can be configured by scanning programming barcodes. All user programmable features/options are described along with their programming barcodes/commands in the following sections.

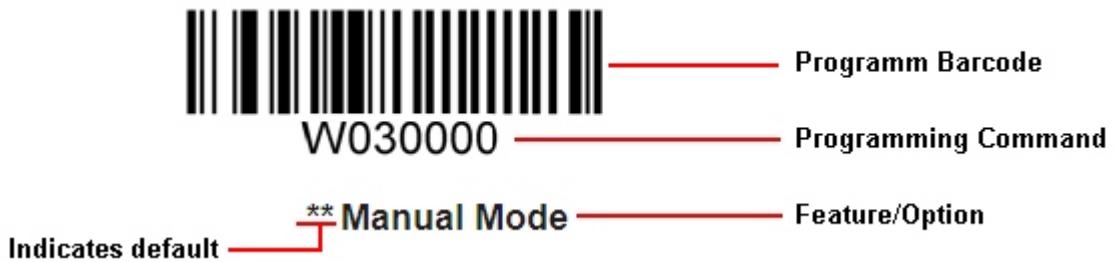

Command Programming

Besides the barcode programming method, the XL-3956 can also be configured by serial commands sent from the host device. Note that communication parameters on the engine and the host must match so that two devices can communicate with each other. The default settings of the engine are 9600bps, no parity check, 8 data bits, 1 stop bit, and no flow control. The engine uses 8bit registers.

Read Register

The read command is used to read the contents of 1 to 256 contiguous registers in the engine.

Format of read command {Prefix1}{Types} {Lens} {Address} {Datas} {FCS}

Prefix1: 0x7E 0x00

Types : 0x07

Lens : 0x01

Address 0x0000~0x00FF, starting register address.

Datas : 0x00~0xFF, number of registers to be read. When Datas=0x00, 256 contiguous registers are to be read.

FCS : CRC-CCITT checksum, 2 bytes.

Computation sequence: Types + Lens + Address + Datas; polynomial: $X^{16}+X^{12}+X^5+1$ (0x1021), initial value: 0x0000.

The following C language program is provided for reference.

```
unsignedintcrc_cal_by_bit(unsignedchar*ptr,unsignedintlen)
{
    unsignedintcrc=0;
    while(len!=0)
    {
        for(unsignedchari=0x80;i!=0;i/=2)
        {
            crc*=2;
            if((crc&0x1000)!=0)
                crc^=0x11021;
            if((*ptr&i)!=0)
                crc^=0x1021;
        }
        ptr++;
    }
    returncrc;
}
```

Reply: {Prefix2}{Types} {Lens} {Datas} {FCS }

1) Success message

Prefix2: 0x02 0x00

Types : 0x00 (success)

Lens : The number of data returned. If Lens=0x00, that means values of 256 contiguous registers are returned.

Datas : 0x00~0xFF, data that are returned.

FCS : CRC-CCITTchecksum

2) CRC check failure message

Prefix2: 0x02 0x00

Types : 0x01 (CRC check failure)

Lens : 0x01

Datas : 0x00

FCS : CRC-CCITTchecksum(0x04 0x01)

3) Invalid command message:

Prefix2: 0x02 0x00

Types : 0x03 (invalid command)

Lens : 0x01

Datas : 0x00

FCS : CRC-CCITTchecksum(0x6A 0x61)

Example:

Read the content (0x3E) of register 0x000A

1) Read operation succeeds

Command sent: 0x7E 0x00 0x07 0x01 0x00 0xA 0x01 0xEE 0x8A

Message received: 0x02 0x00 0x00 0x01 0x3E 0xE4 0xAC

2) CRC check fails:

Command sent: 0x7E 0x00 0x07 0x01 0x00 0xA 0x01 0x11 0x22

Message received: 0x02 0x00 0x01 0x01 0x00 0x04 0x01

3) Situations that may cause the engine to respond with an invalid command message: Commands sent shorter than the required length or the third byte is not sent out within 400ms after the first two bytes “0x7E 0x00” are sent

Command sent: 0x7E 0x00 0x07 0x01 0x00 0xA 0x01

Message received: 0x02 0x00 0x03 0x01 0x00 0x6A 0x61

Write Register

The write command is used to write contiguous registers(1 to 256 registers) in the engine

Format of writecommand {Prefix1}{Types} {Lens} {Address} {Datas} {FCS}

Prefix1: 0x7E 0x00(2 bytes)

Types : 0x08 (1 byte)

Lens : 0x00~0xFF (1 byte) byte count, i.e.number of registers written When Lens=0x00, 256 contiguous registers are to be written.

Address: 0x0000~0xFFFF (2 bytes) starting register address.

Datas : 0x00~0xFF (1~256 bytes) data to be written into the register(s)

FCS : CRC-CCITTchecksum, 2 bytes.

Computation sequence: Types+ Lens+Address+Datas; polynomial: $X^{16}+X^{12}+X^5+1$ (0x1021), initial value: 0x0000.

The following C language program is provided for reference.

```
unsignedintcrc_cal_by_bit(unsignedchar*ptr,unsignedintlen)
{
    unsignedintcrc=0;
    while(len!=0)
    {
        for(unsignedchari=0x80;i!=0;i/=2)
        {
            crc*=2;
            if((crc&0x10000)!=0)
                crc^=0x11021;
            if((*ptr&i)!=0)
                crc^=0x1021;
        }
        ptr++;
    }
    returncrc;
}
```

Reply: {Prefix2}{Types} {Lens} {Datas} {FCS }

1) Success message:

Prefix2: 0x02 0x00

Types : 0x00 (success)

Lens : 0x01

Datas : 0x00

FCS : CRC-CCITTchecksum 0x33 0x31

2) CRC check failure message:

Prefix2: 0x02 0x00

Types : 0x01 (CRC check failure)

Lens : 0x01

Datas : 0x00

FCS : CRC-CCITTchecksum(0x04 0x01)

3) Invalid command message:

Prefix2: 0x02 0x00

Types : 0x03 (invalid command)

Lens : 0x01

Datas : 0x00

FCS : CRC-CCITTchecksum(0x6A 0x61)

Example:

Write0x3E into register 0x000A

1) Write operation succeeds:

Command sent: 0x7E 0x00 0x08 0x01 **0x00 0xA 0x3E 0x4C 0xCF**

Message received:0x02 0x00 0x00 0x01 0x00 **0x33 0x31**

2) CRC check fails:

Command sent: 0x7E 0x00 0x08 0x01 **0x00 0xA 0x3E 0x11 0x22**

Message received:0x02 0x00 0x01 0x01 0x00 **0x04 0x01**

3) Situations that may cause the engine to respond with an invalid command message: Command sent is shorter than the required length, or the third byte is not sent out within 400ms after the first two bytes “0x7e0x00” are sent

Command sent: 0x7E 0x00 0x08 0x01 **0x00 0xA 0x3E**

Message received:0x02 0x00 0x03 0x01 0x00 **0x6A 0x61**

Save Register Data inEEPROM

The save command is used to save register data into an external EEPROM.

Format of savecommand {Prefix1}{Types} {Lens} {Address} {Datas} {FCS }

Prefix1: 0x7E 0x00

Types : 0x09

Lens : 0x01

Address 0x0000

Datas : 0x00

FCS : CRC-CCITTchecksum(0xDE 0xC8)

Reply: {Prefix2}{Types} {Lens} {Datas} {FCS }

1) Success message:

Prefix2: 0x02 0x00

Types : 0x00 (success)

Lens : 0x01

Datas : 0x00

FCS : CRC-CCITTchecksum 0x33 0x31

2) CRC check failure message:

Prefix2: 0x02 0x00

Types : 0x01 (CRC check failure)

Lens : 0x01

Datas : 0x00

FCS : CRC-CCITTchecksum(0x04 0x01)

3) Invalid command message:

Prefix2 : 0x02 0x00

Types : 0x03 (invalid command)

Lens : 0x01

Data : 0x00

FCS : CRC-CCITTchecksum(0x6A 0x61)

Relationship between Programming Command and Serial Command

1. Program general parameter with serial command

A programming command (i.e. the characters under programming barcode) contains 7 characters. The function of each character is described in the table below.

1st Char	2nd Char ~ 3rd Char	4th Char~5th Char	6th Char~7th Char	Remark
CMD	BITPOSITION	ADDR	DATA	
“W”	“00”~“FF”	“00”~“FF”	“00”~“FF”	Write a value (DATA) to the specified bits BITPOSITION of the register (ADDR).

Note: 1. **CMD**: Command type.

2. **ADDR**: Address of register to be written.

3. **BITPOSITION**: Bits the value is written to. For example, if bit 3 is to be written, the BITPOSITION should be “08”; if all bits are to be written, BITPOSITION should be “FF”.

4. **DATA**: Value written to the BITPOSITION.

The **ADDR** and **DATA** in programming command correspond to **Address** and **Data** in serial command, respectively:

1) If BITPOSITION ≠ “FF”, the values of ADDR and DATA can be used directly in the write command.

e.g., programming command WFFD9D8 (write value 0xD8 to register 0x00D9)

serialcommand sent : 0x7E 0x00 0x08 0x01 0x00 0xD9 0xD8 0x91 0x53

reply received : 0x02 0x00 0x00 0x01 0x00 0x33 0x31

2) If BITPOSITION ≠ “FF”, users need to read the register content, calculate the value (Data) and then write the value into the register, as shown in the following example.

e.g., programming command W030002 (write value 0x02 to bit1 and bit0 of register 0x0000)

Step 1: Read the content of register 0x0000

serialcommand sent : 0x7E 0x00 0x07 0x01 0x00 0x00 0x01 0x01 0x41

reply received : 0x02 0x00 0x00 0x01 **0xD4** **0xB8** **0xC8**

Step 2: Calculate the value written to the register

$$\text{Data} = (0xD4 \& (!0x03)) + 0x02 = 0xD5$$

Step 3: Write the value into the register.

serialcommand sent : 0x7E 0x00 0x08 0x01 **0x00** **0x00** **0xD5** **0xEF** **0x41**

reply received : 0x02 0x00 0x00 0x01 0x00 **0x33** **0x31**

2. Programspecial parameter withserial command

The serial commands used for programming the following parameters are practically irrelevant to their programming commands.

Feature	Serial Command
Program the sensitivity level	0x7E 0x00 0x08 0x01 0x00 0x03 0xTT 0xSS 0xSS
Program the image stabilization timeout	0x7E 0x00 0x08 0x01 0x00 0x04 0xTT 0xSS 0xSS
Program the timeout between decodes	0x7E 0x00 0x08 0x01 0x00 0x05 0xTT 0xSS 0xSS
Program the decode session timeout	0x7E 0x00 0x08 0x01 0x00 0x06 0xTT 0xSS 0xSS

Note: Red: Address of register.

Blue: Value written to register. For example, to set the sensitivity level to 10, 0xTT should be 0xA

Pink: CRC checksum calculated.

3. Save register data in EEPROM

Scanning a programming barcode can change register values and save register data in EEPROM as well. As for command programming, it requires a write command and a save command to perform these two tasks. To save register data in an external EEPROM, users need to send the save command to the engine.

save command sent: 0x7E 0x00 0x09 0x01 0x00 0x00 **0xDE** **0xC8**

reply received : 0x02 0x00 0x00 0x01 0x00 **0x33** **0x31**

Registers

Register	0x0000		
Bit	Feature		
Bit 7	1: Good read LED on	0: Good read LED off	
Bit 6	1: Disable the mute mode	0: Enable the mute mode	
Bit 54	Aiming: 00: OFF	01: Normal	10/11: Always ON
Bit 32	Illumination: 00: OFF	01: Normal	10/11: Always ON
Bit 10	Scan Mode: 00: Manual Mode	01: Command Trigger Mode	10: Continuous Mode 11: Sense Mode
Register	0x0002		
Bit	Feature		
Bit 7	1: Enable CODE ID prefix for all symbologies	0: Disable CODE ID prefix for all symbologies	
Bit 6	1: Enable decode result notification	0: Disable decode result notification	
Bit 5	Reserved		
Bit 4	1: Video reverse ON	0: Video reverse OFF	
Bit 30	Reserved		
Register	0x0004		
Bit	Feature		
Bit 70	Image Stabilization Timeout: 0x00-0xFF: 0.0-25.5s		
Register	0x0005		
Bit	Feature		
Bit 70	Timeout between Decodes: 0x00-0xFF: 0.025.5s		
Register	0x0006		
Bit	Feature		
Bit 70	Decode Session Timeout: 0x00-0xFF: 0.025.5s		

Register	0x0009				
Bit	Feature				
Bit 70	Good Read Beep Frequency 0xDA: Low	0x4B: Medium	0x25: High		
Register	0x000A				
Bit	Feature				
Bit 70	Good Read Beep Duration 0x1F: 40ms	0x3E: 80ms	0x5D: 120ms		
Register	0x000C				
Bit	Feature				
Bit 74	Reserved				
Bit 3	1: Enable Data Matrix	0: Disable Data Matrix			
Bit 2	1: Enable 1D symbologies	0: Disable 1D symbologies			
Bit 1	1: Enable AIM ID prefix for PDF417	0: Disable AIM ID prefix for PDF417			
Bit 0	1: Enable PDF417	0: Disable PDF417			
Register	0x000D				
Bit	Feature				
Bit 7	1: Enable QR Code	0: Disable QR Code			
Bit 62	Reserved				
Bit 10	00: USB DATAPIPE 10: USB COM Port Emulation	01: USB HID-KBW 11: HID-POS			
Register	0x000E				
Bit	Feature				
Bit 74	Reserved				
Bit 3	1: Beep on unknown character	0: Do not beep on unknown character			
Bit 2	1: Good readbeep on	0: Good read beep off			
Bit 10	Reserved				

Register	0x0010	
Bit	Feature	
Bit 75	Reserved	
Bit 43	00: Disable AIM ID prefix for 1D symbologies 01: Allow to enable/disable AIM ID prefix for individual 1D symbology 10/11: Enable AIM ID prefix for 1D symbologies	
Bit 2-0	Reserved	
Register	0x0011	
Bit	Feature	
Bit 7	1: Enable AIM ID prefix for ISSN Note: Bit4 and Bit3 of register 0x0010 must be set to "01" in order for this parameter to function.	0: Disable AIM ID prefix for ISSN
Bit 6	1: Enable ISSN	0: Disable ISSN
Bit 5	1: Enable EAN13 5-digit addon code	0: Disable EAN13 5-digit addon code
Bit 4	1: Enable EAN13 2-digit addon code	0: Disable EAN13 2-digit addon code
Bit 3	1: EAN13 addon code required	0: EAN13 addon code not required
Bit 2	1: Transmit EAN13 check digit	0: Do not transmit EAN-13 check digit
Bit 1	1: Enable AIM ID prefix for EAN -13 Note: Bit4 and Bit3 of register 0x0010 must be set to "01" in order for this parameter to function.	0: Disable AIM ID prefix for EAN -13
Bit 0	1: Enable EAN13	0: Disable EAN -13
Register	0x0012	
Bit	Feature	
Bit 7	Reserved	
Bit 6	1: Transmit Code 93 check digit Note: Code 93 check digit verification must be enabled for this parameter to function.	0: Do not transmit Code 93 check digit
Bit 5	1: Enable Code 93 check digit	0: Disable Code 93 check digit
Bit 4	1: Enable AIM ID prefix for Code 93 Note: Bit4 and Bit3 of register 0x0010 must be set to "01" in order for this parameter to function.	0: Disable AIM ID prefix for Code 93
Bit 3	1: Enable Code 93	0: Disable Code 93
Bit 2	ISBN Format 1: ISBN10	0: ISBN-13
Bit 1	1: Enable AIM ID prefix for ISBN Note: Bit4 and Bit3 of register 0x0010 must be set to "01" in order for this parameter to function.	0: Disable AIM ID prefix for ISBN
Bit 0	1: Enable ISBN	0: Disable ISBN

Register	0x0013	
Bit	Feature	
Bit 7	Reserved	
Bit 6	1: Enable EAN -8 zero extend	0: Disable EAN-8 zero extend
Bit 5	1: Enable EAN -8 5-digit add-on code	0: Disable EAN-8 5-digit add-on code
Bit 4	1: Enable EAN -8 2-digit add-on code	0: Disable EAN-8 2-digit add-on code
Bit 3	1: EAN8 add-on code required	0: EAN -8 add-on code not required
Bit 2	1: Transmit EAN -8 check digit	0: Do not transmit EAN -8 check digit
Bit 1	1: Enable AIM ID prefix for EAN -8 Note: Bit4 and Bit3 of register 0x0010 must be set to "01" in order for this parameter to function.	0: Disable AIM ID prefix for EAN -8
Bit 0	1: Enable EAN8	0: Disable EAN-8
Register	0x0014	
Bit	Feature	
Bit 7	Reserved	
Bit 6	1: Enable UPCE 5-digit add-on code	0: Disable UPCE 5-digit add-on code
Bit 5	1: Enable UPCE 2-digit add-on code	0: Disable UPCE 2-digit add-on code
Bit 4	1: UPC-E add-on code required	0: UPC -E add-on code not required
Bit 3	1: Transmit UPC-E system character	0: Do not transmit UPC-E system character
Bit 2	1: Transmit UPC-E check digit	0: Do not transmit UPC-E check digit
Bit 1	1: Enable AIM ID prefix for UPC-E Note: Bit4 and Bit3 of register 0x0010 must be set to "01" in order for this parameter to function.	0: Disable AIM ID prefix for UPC-E
Bit 0	1: Enable UPCE	0: Disable UPC-E
Register	0x0015	
Bit	Feature	
Bit 7	1: Enable UPCE extend	0: Disable UPCE extend
Bit 6	1: Enable UPCA 5-digit add-on code	0: Disable UPCA 5-digit add-on code
Bit 5	1: Enable UPCA 2-digit add-on code	0: Disable UPCA 2-digit add-on code
Bit 4	1: UPC-A add-on code required	0: UPC-A add-on code not required
Bit 3	1: Transmit UPC -A preamble character	0: Do not transmit UPC-A preamble character
Bit 2	1: Transmit UPC -A check digit	0: Do not transmit UPC -A check digit
Bit 1	1: Enable AIM ID prefix for UPC-A Note: Bit4 and Bit3 of register 0x0010 must be set to "01" in order for this parameter to function.	0: Disable AIM ID prefix for UPC -A
Bit 0	1: Enable UPCA	0: Disable UPC-A

Register	0x0016
Bit	Feature
Bit 7	1: TransmiAIM 128 check digit in the format of “~nnn” (nnn: ASCII decimal value of check digit) 0: Do not transmit AIM 128 check digit
Bit 6	1: FNC1 character in AIM 128 transmitted as “~” (ASCII value: 126) 0: FNC1 character in AIM 128 transmitted as GS (ASCII value: 29)
Bit 5	1: Enable AIM ID prefix for AIM 128 Note: Bit4 and Bit3 of register 0x0010 must be set to “01” in order for this parameter to function. 0: Disable AIM ID prefix for AIM 128
Bit 4	1: Enable AIM 128 0: Disable AIM 128
Bit 3	1: Transmit Code 128 check digit in the format of “~nnn” (nnn: ASCII decimal value of check digit) 0: Do not transmit Code 128 check digit
Bit 2	1: FNC1 character in Code 128 transmitted as “~” (ASCII value: 126) 0: FNC1 character inCode 128 transmitted as GS (ASCII value: 29)
Bit 1	1: Enable AIM ID prefix for Code 128 Note: Bit4 and Bit3 of register 0x0010 must be set to “01” in order for this parameter to function. 0: Disable AIM ID prefix for Code 128
Bit 0	1: Enable Code 128 0: Disable Code 128
Register	0x0017
Bit	Feature
Bit 7	Reserved
Bit 6	1: Transmit programming barcode data (FNC3 Code 128) 0: Do not transmit programming barcode data (FNC3 Code 128)
Bit 5	1: Enable AIM ID prefix for FNC3 Code 128 Note: Bit4 and Bit3 of register 0x0010 must be set to “01” in order for this parameter to function. 0: Disable AIM ID prefix for FNC3 Code 128
Bit 4	1: Enable FNC3 Code 128 0: Disable FNC3 Code 128
Bit 3	1: Transmit UCC/EAN-128 check digit in the format of “~nnn” (nnn: ASCII decimal value of check digit) 0: Do not transmit UCC/EAN -128 check digit
Bit 2	1: FNC1 character in UCC/EAN -128 transmitted as “~” (ASCII value: 126) 0: FNC1 character in UCC/EAN -128 transmitted as GS (ASCII value: 29)
Bit 1	1: Enable AIM ID prefix for UCC/EAN -128 Note: Bit4 and Bit3 of register 0x0010 must be set to “01” in order for this parameter to function. 0: Disable AIM ID prefix for UCC/EAN-128
Bit 0	1: Enable UCC/EAN128 0: Disable UCC/EAN-128

Register	0x0018	
Bit	Feature	
Bit 7	1: Transmit ITF-14 check digit	0: Do not transmit ITF-14 check digit
Bit 6	1: Enable AIM ID prefix for ITF-14 Note: Bit4 and Bit3 of register 0x0010 must be set to "01" in order for this parameter to function.	0: Disable AIM ID prefix for ITF-14
Bit 5	1: Enable ITF14	0: Disable ITF-14
Bit 4	1: Transmit appended "0" of Interleaved 2 of 5 0: Do not transmit appended "0" of Interleaved 2 of 5	
Bit 3	1: Transmit Interleaved 2 of 5 check digit Note: Interleaved 2 of 5 check digit verification must be enabled for this parameter to function.	0: Do not transmit Interleaved 2 of 5 check digit
Bit 2	1: Enable Interleaved 2 of 5 check digit	0: Disable Interleaved 2 of 5 check digit
Bit 1	1: Enable AIM ID prefix for Interleaved 2 of 5 Note: Bit4 and Bit3 of register 0x0010 must be set to "01" in order for this parameter to function.	0: Disable AIM ID prefix for Interleaved 2 of 5
Bit 0	1: Enable Interleaved 2 of 5	0: Disable Interleaved 2 of 5
Register	0x0019	
Bit	Feature	
Bit 7	Reserved	
Bit 6	1: Transmit Industrial 2 of 5 check digit Note: Industrial 2 of 5 check digit verification must be enabled for this parameter to function.	0: Do not transmit Industrial 2 of 5 check digit
Bit 5	1: Enable Industrial 2 of 5 check digit	0: Disable Industrial 2 of 5 check digit
Bit 4	1: Enable AIM ID prefix for Industrial 2 of 5 Note: Bit4 and Bit3 of register 0x0010 must be set to "01" in order for this parameter to function.	0: Disable AIM ID prefix for Industrial 2 of 5
Bit 3	1: Enable Industrial 2 of 5	0: Disable Industrial 2 of 5
Bit 2	1: Transmit ITF-6 check digit	0: Do not transmit ITF-6 check digit
Bit 1	1: Enable AIM ID prefix for ITF-6 Note: Bit4 and Bit3 of register 0x0010 must be set to "01" in order for this parameter to function.	0: Disable AIM ID prefix for ITF-6
Bit 0	1: Enable ITF6	0: Disable ITF6

Register	0x001A	
Bit	Feature	
Bit 7	1: Transmit Standard 2 of 5 check digit Note: Standard 2 of 5 check digit verification must be enabled for this parameter to function.	0: Do not transmit Standard 2 of 5 check digit
Bit 6	1: Enable Standard 2 of 5 check digit	0: Disable Standard 2 of 5 check digit
Bit 5	1: Enable AIM ID prefix for Standard 2 of 5 Note: Bit4 and Bit3 of register 0x0010 must be set to "01" in order for this parameter to function.	0: Disable AIM ID prefix for Standard 2 of 5
Bit 4	1: Enable Standard 2 of 5	0: Disable Standard 2 of 5
Bit 3	1: Transmit Matrix 2 of 5 check digit Note: Matrix 2 of 5 check digit verification must be enabled for this parameter to function.	0: Do not transmit Matrix 2 of 5 check digit
Bit 2	1: Enable Matrix 2 of 5 check digit	0: Disable Matrix 2 of 5 check digit
Bit 1	1: Enable AIM ID prefix for Matrix 2 of 5 Note: Bit4 and Bit3 of register 0x0010 must be set to "01" in order for this parameter to function.	0: Disable AIM ID prefix for Matrix 2 of 5
Bit 0	1: Enable Matrix 2 of 5	0: Disable Matrix 2 of 5
Register	0x001B	
Bit	Feature	
Bit 7	1: Enable AIM ID prefix for RSS-Expand Note: Bit4 and Bit3 of register 0x0010 must be set to "01" in order for this parameter to function.	0: Disable AIM ID prefix for RSS-Expand
Bit 6	1: Enable RSS-Expand	0: Disable RSS-Expand
Bit 5	1: Transmit RSS-Limited application identifier 0: Do not transmit RSS-Limited application identifier	
Bit 4	1: Enable AIM ID prefix for RSS-Limited Note: Bit4 and Bit3 of register 0x0010 must be set to "01" in order for this parameter to function.	0: Disable AIM ID prefix for RSS-Limited
Bit 3	1: Enable RSS-Limited	0: Disable RSS-Limited
Bit 2	1: Transmit RSS-14 application identifier	0: Do not transmit RSS-14 application identifier
Bit 1	1: Enable AIM ID prefix for RSS -14 Note: Bit4 and Bit3 of register 0x0010 must be set to "01" in order for this parameter to function.	0: Disable AIM ID prefix for RSS -14
Bit 0	1: Enable RSS-14	0: Disable RSS-14

Register	0x001C	
Bit	Feature	
Bit 76	Reserved	
Bit 5	1: Enable Code 39 Full ASCII	0: Disable Code 39 Full ASCII
Bit 4	1: Transmit Code 39 check digit Note: Code 39 check digit verification must be enabled for this parameter to function.	0: Do not transmit Code 39 check digit
Bit 3	1: Enable Code 39 check digit	0: Disable Code 39 check digit
Bit 2	1: Transmit Code 39 start/stop characters	0: Do not transmit Code 39 start/stop characters
Bit 1	1: Enable AIM ID prefix for Code 39 Note: Bit4 and Bit3 of register 0x0010 must be set to "01" in order for this parameter to function.	0: Disable AIM ID prefix for Code 39
Bit 0	1: Enable Code 39	0: Disable Code 39
Register	0x001D	
Bit	Feature	
Bit 76	Reserved	
Bit 5	1: Transmit Code 11 check digit Note: Code 11 check digit verification must be enabled for this parameter to function.	0: Do not transmit Code 11 check digit
Bit 4	Code 11 Check Digit Verification: 000: Disable 001: One check digit, MOD11 010: Two check digits, MOD11/MOD11 011: Two check digits, MOD11/MOD9 100: One check digit, MOD11 (Len <= 11); two check digits, MOD11/MOD11 (Len > 11) 101: One check digit, MOD11 (Len <= 11); two check digits, MOD11/MOD9 (Len > 11)	
Bit 1	1: Enable AIM ID prefix for Code 11 Note: Bit4 and Bit3 of register 0x0010 must be set to "01" in order for this parameter to function.	0: Disable AIM ID prefix for Code 11
Bit 0	1: Enable Code 11	0: Disable Code 11

Register	0x001E	
Bit	Feature	
Bit 76	Reserved	
Bit 5	1: Transmit Codabar check digit Note: Code 39 check digit verification must be enabled for this parameter to function.	0: Do not transmit Codabar check digit
Bit 4	1: Enable Codabar check digit	0: Disable Codabar check digit
Bit 32	Codabar Start/Stop Character Format: 00: ABCD/ABCD 10: abcd/abcd	01: ABCD/TN*E 11: abcd/tn*e
Bit 1	1: Transmit Codabar start/stop characters	0: Do not transmit Codabar start/stop characters
Bit 0	1: Enable Codabar	0: Disable Codabar
Register	0x001F	
Bit	Feature	
Bit 7	Reserved	
Bit 6	1: Transmit MSI-Plessey check digit Note: MSI-Plessey check digit verification must be enabled for this parameter to function.	0: Do not transmit MSI-Plessey check digit
Bit 54	MSI-Plessey Check Digit Verification: 00: Disable 01: One check digit, MOD10 10: Two check digits, MOD10/MOD10 11: Two check digits, MOD10/MOD11	
Bit 3	1: Enable MSI-Plessey	0: Disable MSI-Plessey
Bit 2	1: Transmit Plessey check digit Note: Plessey check digit verification must be enabled for this parameter to function.	0: Do not transmit MSI-Plessey check digit
Bit 1	1: Enable Plessey check digit	0: Disable Plessey check digit
Bit 0	1: Enable Plessey	0: Disable Plessey

Register	0x0020
Bit	Feature
Bit 73	Reserved
Bit 2	1: Enable AIM ID prefix for MSI-Plessey 0: Disable AIM ID prefix for MSI-Plessey Note: Bit4 and Bit3 of register 0x0010 must be set to "01" in order for this parameter to function.
Bit 1	1: Enable AIM ID prefix for Plessey 0: Disable AIM ID prefix for Plessey Note: Bit4 and Bit3 of register 0x0010 must be set to "01" in order for this parameter to function.
Bit 0	1: Enable AIMD prefix for Codabar 0: Disable AIM ID prefix for Codabar Note: Bit4 and Bit3 of register 0x0010 must be set to "01" in order for this parameter to function.
Register	0x002B, 0x2A
Bit	Feature
Bit 15-13	Reserved
Bit 12-0	0x09C4: Baud rate 1200 0x04E2: Baud rate 2400 0x0271: Baud rate 4800 0x0139: Baud rate 9600 0x00D0: Baud rate 14400 0x009C: Baud rate 19200 0x004E: Baud rate 38400 0x0034: Baud rate 57600 0x001A: Baud rate 115200
Register	0x004A
Bit	Feature
Bit 7-5	Reserved
Bit 4	0: 752*480 image 1: 640*480 image
Bit 3-2	00: Decode unmirrored Data Matrix only 01: Decode mirrored Data Matrix only 10/11: Decode both
Bit 1	1: Decode Data Matrix starting with the character whose ASCII value is 129 0: Do not decode Data Matrix starting with the character whose ASCII value is 129
Bit 0	1: Decode Data Matrix with FNC1 0: Do not decode Data Matrix with FNC1

Register	0x004B		
Bit	Feature		
Bit 7 ²	Reserved		
Bit 1	1: Decode rectangular Data Matrix	0: Do not decode rectangular Data Matrix	
Bit 0	Reserved		
Register	0x0060		
Bit	Feature		
Bit 7	Reserved		
Bit 6 ⁵	Terminating Character Suffix: 00/11: CR (0x0D)	01: CRLF (0x0D,0x0A)	10: TAB (0x09)
Bit 4	Reserved		
Bit 3	1: Caps Lock ON	0: Caps Lock OFF	
Bit 2 ¹	00: Standard Keyboard 10/11: Function Key Mapping	01: Emulate ALT+ Keypad	
Bit 0	1: Enable terminating character suffix	0: Disable terminating character suffix	
Register	0x006B		
Bit	Feature		
Bit 7 ⁰	USB country keyboard types 00: U.S 03: Canada 06: Denmark 09: Greece 0C: Italy 0F: Norway 12: Romania 16: Spain 19: Turkey 1C: Japan	01: Belgium 04: Czech 07: France 0A: Hungary 0D: LatinAmerica : Poland 13: Russia 17: Sweden 1A: Turkey	02: Brazil 05: Denmark 08: Austria 0B: Israel 0E: Netherland 11: Portugal 15: Slovakia 18: Switzerland 1B: UK

Register	0x006F		
Bit	Feature		
Bit 76	Interkeystroke delay 00: No delay 10: Medium delay (10ms)	01: Short delay (5ms) 11: Long delay (15ms)	
Bit 54	Convert case 00: No case conversion	10: Convert All to Upper Case	11: Convert All to Lower Case
Bit 3	Reserved		
Bit 2	1: Emulate numeric keypad	0: Do not emulate numeric keypad	
Bit 1-0	Reserved		
Register	0x008A		
Bit	Feature		
Bit 7-1	Reserved		
Bit 0	1: Visible Code ID (original+ 0x40)	0: Original Code ID	
Register	0x0099		
Bit	Feature		
Bit 7-4	Reserved		
Bit 3	1: Decode mirrored Micro QR	0: Do not decode mirrored Micro QR	
Bit 2	1: Enable Micro QR	0: Disable Micro QR	
Bit 1	1: Enable AIM ID prefix for QR	0: Disable AIM ID prefix for QR	
Bit 0	Reserved		

Programming Barcode Data

Programming barcode data (e.g. WFFD980) can be transmitted to the Host. To enable this feature, scan the barcode below. After the feature is enabled, programming barcodes will be handled as non-programming barcodes and they cannot be used to configure the scan engine. The barcode data will be sent to the Host when a programming barcode is scanned and decoded. By default, the EM3080 does not transmit programming barcode data.

After the engine is powered down and re-energized, this feature will be automatically disabled (i.e. the engine does not transmit programming barcode data) and the ability of programming barcodes to configure the engine will be restored.



W401740

Transmit Programming Barcode Data

Factory Defaults

Scanning the following barcode can reset the engine to the factory defaults. See [Appendix A: Factory Defaults Table](#) for more information.

Note: Use this feature with discretion.



Restore All Factory Defaults

Chapter2 Communication Interface

The EM3080 series provides a TTL-232 interface (XL-3956) and a USB interface (XL-3956 -01) to communicate with the host device. The host device can receive scanned data and send commands to control the engine or to access/alter the configuration information of the engine via the TTL-232 interface.

TTL-232 Interface(for XL-3956)

Serial communication interface is usually used to connect the engine to a host device (like PC, POS). When the XL-3956 is connected to a host device through its TTL-232 interface, **Serial Communication** is enabled by default. However, to ensure smooth communication and accuracy of data, communication parameters (including baud rate, parity check, data bit and stop bit) of the engine must match those on the host device.

The serial communication interface provided by the engine is based on TTL-level signals. TTL-232 can be used for most application architectures. For those requiring RS-232, an external conversion circuit is needed.

Listed below are the engine's default serial communication parameters, among which only baud rate can be altered.

Parameter	Factory Default
Serial Communication	Standard TTL-232
Baud Rate	9600
Parity Check	None
Number of Data Bits	8
Number of Stop Bits	1
Hardware Flow Control	None

Baud Rate

Baud rate is the number of bits of data transmitted per second. Set the baud rate to match the Host requirements



WFFD9D3

****9600**



WFFD9D0

1200



WFFD9D5

19200



WFFD9D1

2400



WFFD9D6

38400



WFFD9D2

4800



WFFD9D7

57600



WFFD9D4

14400



WFFD9D8

115200

USB Interface(for XL-3956 - 01)

When the engine is connected to a host device through its USB interface, **USB DATAPIPE** is enabled by default. User can switch between options **USB DATAPIPE**, **USB HID-KBW**, **USB COM Port Emulation** and **HID-POS**, upon actual need.

USB DATAPIPE

A driver is required when using this protocol to communicate with the engine.



**** USB DATAPIPE**

USB HID-KBW

When the engine is connected to the Host via a USB connection, you can enable **USB HID-KBW** feature by scanning the barcode below. Then the engine's transmission will be simulated as USB keyboard input. The Host receives keystrokes on the virtual keyboard. It works on a Plug and Play basis and no driver is required.



USB HID-KBW

Standard Keyboard

When the USB HIDKBW feature is enabled, the engine selects **Standard Keyboard** by default. Besides that, the other two options are provided **Emulate ALT+Keypad** and **Function Key Mapping**.



**** Standard Keyboard**

Emulate ALT+Keypad

When **Emulate ALT+Keypad** is enabled, any ASCII character (0x00-0xFF) is sent over the numeric keypad no matter which keyboard type is selected. Since sending a character involves multiple keystroke emulations, this method appears less efficient.

1. ALT Make
2. Enter the number corresponding to the ASCII character on the keypad.
3. ALT Break



Emulate ALT+Keypad

Note: It is recommended to turn on the Num Lock light on the host when using this feature.

Function Key Mapping

When **Function Key Mapping** is enabled, function character (0x00x1F) are sent as ASCII sequences over the numeric keypad.

1. CTRL Make
2. Press function key (Refer to the **ASCII Function Key Mapping Table** on the following page)
3. CTRL Break



W066002

Function Key Mapping

ASCII Function Key Mapping Table

ASCII Value (HEX)	Function Key	ASCII Value (HEX)	Function Key
00	2	10	P
01	A	11	Q
02	B	12	R
03	C	13	S
04	D	14	T
05	E	15	U
06	F	16	V
07	G	17	W
08	H	18	X
09	I	19	Y
0A	J	1A	Z
0B	K	1B	[
0C	L	1C	₩
0D	M	1D]
0E	N	1E	6
0F	O	1F	.

USB Country Keyboard Types

Keyboard layouts vary from country to country. All supported keyboard types are listed below. The default setting is US keyboard.



WFF6B00

**** 1 - U.S.**



WFF6B01

2 - Belgium



WFF6B02

3 - Brazil



WFF6B03

4 - Canada



WFF6B04

5 - Czech



WFF6B05

6 - Denmark



WFF6B06

7 - Finland



WFF6B07

8 - France



WFF6B08

9 - Austria



WFF6B09

10 - Greece



WFF6B0A

11 - Hungary



WFF6B0B

12 - Israel



WFF6B0C

13 - Italy



WFF6B0D

14 - Latin America



WFF6B0E

15 - Netherland



WFF6B0F

16 - Norway



WFF6B10

17 - Poland



WFF6B11

18 - Portugal



WFF6B12

19 - Romania



WFF6B13

20 - Russia



WFF6B15

21 - Slovakia



WFF6B16

22 - Spain



WFF6B17

23 - Sweden



WFF6B18

24 - Switzerland



WFF6B19

25 - Turkey1



WFF6B1A

26 - Turkey 2



WFF6B1B

27 - UK



WFF6B1C

28 - Japan

Beep on Unknown Character

Due to the differences in keyboard layouts, some characters contained in mode data may be unavailable on the selected keyboard. As a result, the engine fails to transmit the unknown characters.

Scan the appropriate barcode below to enable or disable the emission of beep when an unknown character is detected.



**** Beep on Unknown Character**



Do Not Beep on Unknown Character

InterKeystroke Delay

This parameter specifies the delay between emulated keystrokes.



**** No Delay**



Short Delay (5ms)



Medium Delay (10ms)



Long Delay (15ms)

Caps Lock

The **Caps Lock ON** option can invert upper and lower case characters contained in barcode data. This inversion occurs regardless of the state of Caps Lock key on the Host's keyboard.



W086000

**** Caps Lock OFF**



W086008

Caps Lock ON

Note: Emulate ALT+Keypad ON/Convert All toUpper Case/Convert All to Lower Case prevails over Caps Lock ON.

Example: When the **Caps Lock ON** is selected, barcode data “AbC” is transmitted as “aBc”.

Convert Case

Scan the appropriate barcode below to convert all bar code data to your desired case.



W306F00

**** No Case Conversion**



W306F30

Convert All to Lower Case



W306F20

Convert All to Upper Case

Example: When the **Convert All to Lower Case** feature is enabled, barcode data “AbC” is transmitted as “abc”.

Emulate Numeric Keypad

When this feature is disabled, sending barcode data is emulated as keystroke(s) on main keyboard.

To enable this feature, scan the **Emulate Numeric Keypad** barcode. Sending a number (0-9) is emulated as keystroke on numeric keypad, whereas sending other character like “+” “*” “_” “/” and “.” is still emulated as keystroke on main keyboard; however, this feature is influenced by the state of the Num Lock key on the host: if the Num Lock light on the host is ON, numbers are sent over numeric keypad, if it is OFF, numbers are sent over main keyboard.



Emulate Numeric Keypad



**** Do Not Emulate Numeric Keypad**

Note: Make sure the Num Lock light of the Host is turned **ON** using this feature.

Emulate ALT+Keypad ON prevails over **Emulate Numeric Keypad**

USB COM Port Emulation

If you connect the engine to the Host via a USB connection, the USB COM Port Emulation feature allows the Host to receive data in the way as a serial port does. However, you need to set communication parameters on the engine to match the Host requirements. A driver is required for this feature.



USB COM Port Emulation

HID-POS

The HIDPOS interface is recommended for new application programs. It can send up to 56 characters in a single USB report and appears more efficient than USB-KIBW.

Features:

HID based, no custom driver required.

Way more efficient in communication than USB-KIBW and traditional RS232 interface.

Note: HID-POS does not require a custom driver. However, a HID interface on Windows 98 does. All HID interfaces employ standard driver provided by the operating system. Use defaults when installing the driver.



HID-POS

Access the Scanner with Your Program

1. Use CreateFile to access the engine as a HID device.
2. Use ReadFile to deliver the scanned data to the application program.
3. Use WriteFile to send data to the engine.

For detailed information about USB and HID interfaces, www.USB.org

Acquire Scanned Data

After a barcode is decoded, the engine sends an input report as below:

Byte	7	6	5	4	3	2	1	0	Bit
0	Report ID = 0x02								
1	Barcode Length								
2-57	Decoded Data (156)								
58-61	Reserved (14)								
62	0x00								
63	-	-	-	-	-	-	-	-	Decoded Data

Continued

VID/PID

USB uses VID (Vendor ID) and PID (Product ID) to identify and locate a device. VID is assigned by USB Implementers Forum. Newland's vendor ID is 1EAB (Hex). A range of PIDs are used for each SUNLUX product family. Every PID contains a base number and interface type (keyboard, COM port etc.).

Product	Interface	PID (Hex)	PID (Dec)
XL-3956-01	USB DATAPIPE	8001	32769
	USB HID KBW	8003	32771
	USB COM Port Emulation	8006	32774
	HID-POS	8010	32784

Chapter3 Scan Mode

ManualMode

Manual Mode(default)A trigger pull activates a decode session. The decode session continues until the barcode is decoded or the trigger is released.



**Manual Mode

Continuous Mode

Continuous Mode The engine automatically activates a decode session. The decode session continues until the barcode is decoded or the decode session timeout expires. When a decode session is completed, the engine waits until the timeout between decodes expires and then starts next session. The engine continues to work in this pattern. In the following situation does not happen: if a barcode is presented to the engine or placed in front of it during a decode session, the engine will automatically suspend barcode reading. Pressing the trigger can suspend/ resume barcode reading.



Continuous Mode

Decode Session Timeout

This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 0.1s increments from 0.1s to 25.5s. The default timeout is 5s. If the parameter is set to 0, the engine scans and decodes barcode continuously. To learn how to program this parameter, see [Appendix E: Parameter Programming Examples](#).



Decode Session Timeout

Timeoutbetween Decodes

This parameter sets the timeout between decode sessions. When a decode session ends, next session will not happen until the timeout between decode sessions expires. It is programmable in 0.1s increments from 0.1s to 25.5s. The default timeout is 0.1s. To learn how to program this parameter, [Appendix E: Parameter Programming Examples](#).



Timeoutbetween Decodes

Sense Mode

Sense Mode The engine waits for the image stabilization timeout to expire before activating a decode session every time it detects a change in ambient illumination. The decode session continues until the barcode is decoded or the decode session timeout expires. After a decode session ends, the engine waits for the timeout between decode sessions to expire before beginning to monitor ambient illumination. If no barcode is presented to the engine or passed in front of it in a decode session, the engine will automatically suspend barcode reading and start to monitor ambient illumination.

In the Sense mode, a trigger pulse can also activate a decode session. The decode session continues until the barcode is decoded or the trigger is released. When the session ends, the engine will continue to monitor ambient illumination.



Sense Mode

Decode Session Timeout

This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 0.1s increments from 0.1s to 25.5s. The default timeout is 5.0s. If the parameter is set to 0, the engine scans and decodes barcode continuously. To learn how to program this parameter, see [Appendix E: Parameter Programming Examples](#).



Decode Session Timeout

Timeoutbetween Decodes

After a decode session ends, the engine waits for the timeout between decode expire before beginning to monitor ambient illumination. This parameter is programmable in 0.1s increments from 0.1s to 25.5s. The default timeout is 0.4s. To learn how to program this parameter, [Appendix E: Parameter Programming Examples](#).



Timeoutbetween Decodes

Image Stabilization Timeout

The engine waits for the image stabilization timeout expire before activating a decode session every time it detects a change in ambient illumination. This parameter is programmable in 0.1s increments from 0.1s to 25.5s. The default timeout is 0.4s. To learn how to program this parameter, [Appendix E: Parameter Programming Examples](#).



Image Stabilization Timeout

Sensitivity

Sensitivity specifies the degree of acuteness of the engine's response to changes in ambient illumination. The higher the sensitivity, the lower the requirement in illumination change to trigger the engine. You can select an appropriate degree of sensitivity that fits the ambient environment. The default setting is Medium Sensitivity.



WFF0308

High Sensitivity



WFF0320

****Medium Sensitivity**



WFF0340

Low Sensitivity

Sensitivity levels range from 0 to 255. The smaller the number, the higher the sensitivity.

User can select a desired sensitivity level that helps achieve greater efficiency. To learn how to program this parameter, see [Appendix E: Parameter Programming Examples](#).



M00031A

Custom Sensitivity

Command Trigger Mode

Command Trigger Mode: Decode session is activated by a host command (i.e. set the bit ~~register~~ 0x0002 to “1”). The decode session continues until the barcode is decoded ~~or~~ the decode session timeout expires.



Command Trigger Mode

Decode Session Timeout

This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 0.1s increments from 0.1s to 25.5s. The default timeout is 5s. If the parameter is set to 0, the engine scans and decodes barcode continuously. To learn how to program this parameter, see [Appendix E: Parameter Programming Examples](#).



Decode Session Timeout

Chapter4 Illumination & Aiming

Illumination

A couple of illumination options are provided to improve the lighting conditions during every image capture:

Normal(default) Illumination LEDs turned on during image capture.

Always ON Illumination LED keepON after the engine is powered on.

OFF: Illumination LEDs OFF all the time.



W0C0004

****Normal**



W0C0000

OFF



W0C000C

Always ON

Aiming

When scanning/capturing image, the engine projects an aiming beam which allows positioning the target barcode within its field of view and makes decoding easier.

Normal(default) The engine projects an aiming beam only during barcode scanning/capture.

Always ON: Aimingbeam is constantly ON after the engine is powered on.

OFF: Aimingbeam is OFF all the time.



W300010

****Normal**



W300000

OFF



W300030

Always ON

Chapter5 Notification

MuteMode

Scanning the **Enable Mute Mode** can turn off all notification beeps. By default, mute mode is disabled.



W400000

Enable Mute Mode



W400040

***Disable Mute Mode**

Good ReadBeep



W040E04

****Good ReadBeep On**



W040E00

Good ReadBeep Off

Good ReadBeep Frequency



WFF09DA

Low



WFF094B

**Medium



WFF0925

High

Good ReadBeep Duration



WFF0A1F

40ms



WFF0A3E

**80ms



WFF0A5D

120ms

Decode Result Notification

When enabled, if a barcode does not decode, “F” is transmitted; if a barcode is decoded, “S” is appended to the barcode data as the most left character.



Enable Decode Result Notification



****Disable Decode Result Notification**

Chapter6 Data Formatting

In many applications, barcode data needs to be edited and distinguished from one another.

Usually AIM ID and Code ID can be used as identifiers, but in some special cases terminating character suffix like Carriage Return or Line Feed can also be the alternative.

The engine can be configured to transmit barcode data in the following format:

[“F”/“S”] + [Code ID] + [AIM ID] + [DATA] + [Terminating character]

Note: [DATA] must be transmitted while user can decide whether to transmit any of the rest parts.

[“F”/“S”]: decode result notification

AIMID Prefix

AIM (Automatic Identification Manufacturers) IDs define symbology identifiers and data carrier identifiers. For the details, see [Appendix B: AIM ID Table](#). If AIM ID prefix is enabled, the engine will add the symbology identifier before the scanned data after decoding.



WFFD9C0

Enable AIM IDPrefix



WFFD9C1

****Disable AIM IDPrefix**

CODE ID Prefix

Code ID can also be used to identify barcode type. For more information refer to **Appendix C: Code ID Table.**



W800280

Enable CODE ID Prefix



W800200

****Disable CODE ID Prefix**

User can choose to transmit original DDE ID or visible CODE ID by scanning the appropriate barcode below



W018A00

****Original CODE ID**



W018A01

Visible CODE ID

Terminating Character Suffix

A terminating character such as carriage return (CR) or carriage return/line feed pair (CRLF) or horizontal tab (TAB) can be used to mark the end of data



W616000

****Disable Terminating Character Suffix**



W616001

AppendCR



W616021

AppendCRLF



W616041

AppendTAB

Chapter 7 Symbologies

General Settings

Enable/Disable All Symbologies

If all symbologies are disabled, the engine can only identify programming barcodes.



Enable All Symbologies



Disable All Symbologies

Enable/Disable 1D Symbologies



Enable 1D Symbologies



Disable 1D Symbologies

Enable/Disable 2D Symbologies



Enable 2D Symbologies




Disable 2D Symbologies

Video Reverse


Regular barcode: Dark image on a bright background.

Inverse barcode: Bright image on a dark background.

The examples of regular barcode and inverse barcode are shown below.

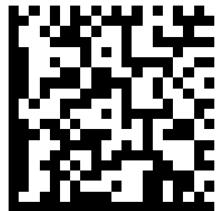

Regular Barcode

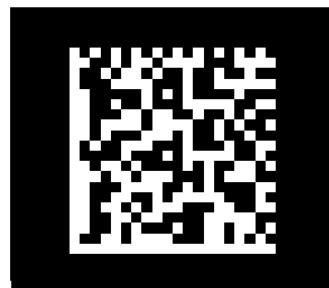

Inverse Barcode

Video Reverse is used to allow the engine to read barcodes that are inverted.

Video Reverse ON : Read both regular barcodes and inverse barcodes.

Video Reverse OFF (default): Read regular barcodes only.

The engine shows a slight decrease in scanning speed when Video Reverse is ON.



Video Reverse ON



****Video Reverse OFF**

1D Symbolologies

Code 128

Restore Factory Defaults



WFFD990

Restore theFactory Defaults of Code 128

Enable/DisableCode 128



W011601

****Enable Code 128**



W011600

Disable Code 128

UCC/EAN-128 (GS1-128)

Restore Factory Defaults



WFFD991

Restore theFactory Defaults ofUCC/EAN-128

Enable/DisableUCC/EAN-128



W011701

**** Enable UCC/EAN-128**



W011700

Disable UCC/EAN-128

AIM128

Restore Factory Defaults



WFFD992

Restore theFactory Defaults ofAIM128

Enable/DisableAIM128



W101610

****Enable AIM128**



W101600

Disable AIM128

EAN-8

Restore Factory Defaults



WFFD994

Restore theFactory Defaults ofEAN-8

Enable/Disable EAN-8



W011301

****Enable EAN-8**



W011300

Disable EAN-8

Transmit Check Digit

EAN-8 is 8 digits in length with the last one as its check digit used to verify the integrity of the data.



W041304

****Transmit EAN8 Check Digit**



W041300

Do Not Transmit EAN8 Check Digit

Add-On Code

An EAN-8 barcode can be augmented with a two digit or five digit add-on code to form a new one. In the examples below the part surrounded by blue dotted line is the EAN-8 barcode while the part circled by red dotted line is the add-on code.



Enable 2-Digit Add-On Code



**Disable 2-Digit Add-On Code



Enable 5-Digit Add-On Code



**Disable 5-Digit Add-On Code

Enable 2-Digit Add-On Code/Enable 5-Digit Add-On Code The engine decodes a mix of EAN-8 barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code The engine decodes EAN-8 and ignores the add-on code when presented within an EAN-8 plus add-on barcode. It can also decode EAN-8 barcodes without add-on codes.

Add-On Code Required

When **EAN-8 AddOn Code Required** is selected, the engine will only read EANbarcodes that contain add-on codes.



EAN-8 AddOn Code Required



****EAN-8 Add-On Code Not Required**

EAN-8 Extension

Disable EAN-8 Zero Extend Transmit EAN-8 barcodes as is.

Enable EAN-8 Zero Extend Add five leading zeros to decoded EANbarcodes to extend to 13 digits.



Enable EAN-8 Zero Extend



****Disable EAN-8 Zero Extend**

EAN-13

Restore Factory Defaults



Restore theFactory Defaults of EAN13

Enable/DisableEAN-13



****Enable EAN-13**



Disable EAN-13

Transmit Check Digit

EAN-13 is 13 digits in length with the last one as its check digit used to verify the integrity of the data.



****Transmit EAN-13 Check Digit**



Do Not Transmit EAN-13 Check Digit

Add-On Code

An EAN13 barcode can be augmented with a two digit or five digit add-on code to form a new one in the examples below the part surrounded by blue dotted line is EAN-13 barcode while the part circled by red dotted lines add-on code.



Enable 2-Digit Add-On Code



****Disable 2-Digit Add-On Code**



Enable 5-Digit Add-On Code



****Disable 5-Digit Add-On Code**

Enable 2-Digit Add-On Code/Enable 5-Digit Add-On Code: The engine decodes a mix of EAN13 barcodes with and without 2digit/5digitadd-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The engine decodes EAN-13 and ignores the add-on code when presented with an EAN-13 plus add-on barcode. It can also decode EAN-13 barcodes without add-on codes

Add-On Code Required

When **EAN-13 Add-On Code Required** is selected, the engine will only decode EAN-13 barcodes that contain add-on codes.



EAN-13 Add-On Code Required



****EAN-13 Add-On Code Not Required**

ISSN

Restore Factory Defaults



Restore theFactory Defaults ofISSN

Enable/Disable ISSN



Enable ISSN



****Disable ISSN**

ISBN

Restore Factory Default



WFFD997

Restore theFactory Defaults of ISBN

Enable/Disable ISBN



W011201

****Enable ISBN**



W011200

Disable ISBN

Set ISBN Format



W041200

****ISBN-13**



W041204

ISBN-10

UPC-E

Restore Factory Defaults



Restore theFactory Defaults of UPCE

Enable/DisableUPC-E



****Enable UPC-E**



Disable UPC-E

Transmit Check Digit

UPC-E is 8 digits in length with the last one as its check digit used to verify integrity of the data.



****Transmit UPC-E Check Digit**



Do Not Transmit UPCE Check Digit

Add-On Code

A UPC-E barcode can be augmented with a two digit or five digit add-on code to form a new one. In the examples below the part surrounded by blue dotted line is the UPC-E barcode while the part circled by red dotted line is the add-on code.



Enable 2-Digit Add-On Code



****Disable 2-Digit Add-On Code**



Enable 5-Digit Add-On Code



****Disable 5-Digit Add-On Code**

Enable 2-Digit Add-On Code/Enable 5-Digit Add-On Code: The engine decodes a mix of UPC-E barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The engine decodes UPC-E and ignores the add-on code when presented with a UPC-E plus add-on barcode. It can also decode UPC-E barcodes without add-on codes.

Add-On Code Required

When **UPC-E Add-On Code Required** is selected, the engine will only print UPC-E barcodes that contain add-on codes.



W101510

UPC-E Add-On Code Required



W101500

****UPC-E Add-On Code Not Required**

Transmit System Character

The first character of UHC barcode is the system character “0”



W081508

Transmit System Character “0”



W081500

****Do Not Transmit System Character “0”**

UPC-E Extension

Disable UPC-E Extend: Transmit UPC-E barcodes as is.

Enable UPC-E Extend: Extend UPC-E barcodes to make them compatible in length to URC



W801580

Enable UPC-E Extend



W801500

****Disable UPC-E Extend**

UPC-A

Restore Factory Defaults



Restore theFactory Defaults of UPGA

Enable/DisableUPC-A



****Enable UPC-A**



Disable UPC-A

Transmit Check Digit

UPC-A is 13 digits in length with the last one as its check digit used to verify the integrity of the data.



****Transmit UPC-A Check Digit**



Do NotTransmit UPC-A Check Digit

Add-On Code

A UPC-A barcode can be augmented with a two-digit or five-digit add-on code to form a new one. In the examples below, the part surrounded by blue dotted line is UPC-A barcode while the part circled by red dotted line is add-on code.



Enable 2-Digit Add-On Code



**Disable 2-Digit Add-On Code



Enable 5-Digit Add-On Code



**Disable 5-Digit Add-On Code

Enable 2-Digit Add-On Code/Enable 5-Digit Add-On Code: The engine decodes a mix of UPC-A barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The engine decodes UPC-A and ignores the add-on code when presented with a UPC-A plus add-on barcode. It can also decode UPC-A barcodes without add-on codes.

Add-On Code Required

When **UPC-A Add-On Code Required** is selected, the engine will only read UPCbarcodes that contain add-on codes.



UPC-A Add-On Code Required



****UPC-A Add-On Code Not Required**

Transmit Preamble Character



Transmit PreambleCharacter "0"



****Do NotTransmit PreambleCharacter "0"**

Note: The preamble character "0" usually does not appear in printed UPCbarcodes.

Interleaved 2 of 5

Restore Factory Defaults



WFFD99A

Restore theFactory Defaults of Interleaved 2 of 5

Enable/Disable Interleaved 2 of 5



W011801

****Enable Interleaved 2 of 5**



W011800

Disable Interleaved 2 of 5

Check Digit Verification

A check digit is optional for Interleaved 2 of 5 and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

Disable: The engine transmits Interleaved 2 of 5 barcodes as is.

Do Not Transmit Check Digit After Verification The engine checks the integrity of all interleaved 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

Transmit Check Digit After Verification: The engine checks the integrity of all interleaved 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



WOC1800

****Disable**



WOC1804

Do Not Transmit Check Digit After Verification



WOC180C

Transmit Check Digit After Verification

Transmit Appended 0"

If an Interleaved 2 of 5 barcode contains an odd number of characters, a leading zero must be appended. Scan the appropriate barcode to choose whether to transmit the appended "0".



W101800

****Transmit Appended "0"**



W101810

Do Not Transmit Appended"0"

ITF-6

ITF-6 is a special kind of Interleaved 2 of 5 with a length of 6 characters and the last character as the check character.



WFFD99B



W011900

Restore the Factory Defaults of ITF-6

****Disable ITF-6**



W051901



W051905

Enable ITF-6 But Do Not Transmit Check Digit

Enable ITF-6 and Transmit Check Digit

Note: It is advisable not to enable ITF-6 and Interleaved 2 of 5 at the same time

ITF-14

ITF-14 is a special kind of interleaved 2 of 5 with a length of 14 characters and the last character as the check character.



WFFD99C



W201800

Restore the Factory Defaults of ITF14

Disable ITF-14



WA01820

Enable ITF-14 But Do Not Transmit Check Digit



WA018A0

****Enable ITF-14 and Transmit Check Digit**

Note: It is advisable not to enable ITF-14 and Interleaved 2 of 5 at the same time

Matrix 2 of 5

Restore Factory Defaults



Restore theFactory Defaults ofMatrix 2 of 5

Enable/DisableMatrix 2of 5



****Enable Matrix 2 of 5**



Disable Matrix 2 of 5

Check Digit Verification



W041A00

****Disable**



W0C1A04

Do Not Transmit Check Digit AfterVerification



W0C1A0C

Transmit Check Digit AfterVerification

Industrial 25

Restore Factory Defaults



WFFD9A0

Restore theFactory Defaults of Industrial 25

Enable/Disable Industrial 25



W081908

****Enable Industrial 25**



W081900

Disable Industrial 25

Check Digit Verification



W201900

****Disable**



W601920

Do Not Transmit Check Digit AfterVerification



W601960

Transmit Check Digit AfterVerification

Standard 25

Restore Factory Defaults



Restore theFactory Defaults ofStandard 25

Enable/Disable Standard 25



****Enable Standard 25**



Disable Standard 25

Check Digit Verification



W401A00

****Disable**



WC01A40

Do Not Transmit Check Digit After Verification



WC01AC0

Transmit Check Digit After Verification

Code 39

Restore Factory Defaults



Restore theFactory Defaults ofCode 39

Enable/DisableCode 39



****Enable Code 39**



Disable Code 39

Transmit Start/Stop Character



Transmit Start/StopCharacter



****Do Not Transmit Start/Stop Character**

Check Digit Verification



W081C00

****Disable**



W181C08

Do Not Transmit Check Digit After Verification



W181C18

Transmit Check Digit After Verification

Enable/Disable Code 39 Full ASCII

The engine can be configured to identify all ASCII characters by scanning the appropriate barcode below.



W201C20

Enable Code 39 Full ASCII



W201C00

****Disable Code 39 Full ASCII**

Codabar

Restore Factory Defaults



WFFD9A3

Restore theFactory Defaults ofCodabar

Enable/DisableCodabar



W011E01

****Enable Codabar**



W011E00

Disable Codabar

Check Digit Verification



W101E00

****Disable**



W301E10

Do Not Transmit Check Digit After Verification



W301E30

Transmit Check Digit After Verification

Transmit Start/Stop Character



W021E02

****Transmit Start/Stop Character**



W021E00

Do Not Transmit Start/Stop Character

Start/Stop Character Format



W0C1E00



W0C1E04

****ABCD/ABCD as the Start/Stop Character**

ABCD/TN*E as the Start/Stop Character



W0C1E08

abcd/abcd as the Start/Stop Character



W0C1E0C

abcd/tn*as the Start/Stop Character

Code 93

Restore Factory Defaults



WFFD9A4

Restore theFactory Defaults ofCode 93

Enable/DisableCode 93



W081208

****Enable Code 93**



W081200

Disable Code 93

Check Digit Verification



W201200

Disable



W601220

****Do Not Transmit Check Digit After Verification**



W601260

Transmit Check Digit After Verification

Code 11

Restore Factory Defaults



Restore theFactory Defaults ofCode 11

Enable/DisableCode 11



****Enable Code 11**



Disable Code 11

Check Digit Verification



W1C1D00

Disable



W1C1D04

**One Check Digit MOD11



W1C1D08

Two Check Digits,MOD11/MOD11



W1C1D0C

Two Check Digits,MOD11/MOD9



W1C1D10

One Check Digit, MOD11 (Len <=11)

Two Check Digits,MOD11/MOD11(Len > 11)



W1C1D14

One Check Digit,MOD11(Len <=11)

Two Check Digits,MOD11/MOD9 (Len > 11)



W201D20

**Transmit Check Digit



W201D00

Do Not Transmit Check Digit

Plessey

Restore Factory Defaults



Restore theFactory Defaults of Plessey

Enable/Disable Plessey



****Enable Plessey**



Disable Plessey

Check Digit Verification



W021F00

Disable



W061F02

****Do Not Transmit Check Digit After Verification**



W061F06

Transmit Check Digit After Verification

MSI-Plessey

Restore Factory Defaults



WFFD9A7

Restore the Factory Defaults of MSI-Plessey

Enable/Disable MSI-Plessey



W081F08

****Enable MSI-Plessey**



W081F00

Disable MSI-Plessey

Check Digit Verification



W301F00

Disable



W301F10

**One Check Digit,MOD10



W301F20

Two Check Digits,MOD10/MOD10



W301F30

Two Check Digits,MOD10/MOD10



W401F40

**Transmit Check Digit



W401F00

Do Not Transmit Check Digit

RSS -14

Restore Factory Defaults



Restore theFactory Defaults of RSS -14

Enable/DisableRSS -14



****Enable RSS -14**



Disable RSS -14

Transmit Application Identifier “01”



****Transmit Application Identifier “01”**



Do NotTransmit Application Identifier “01”

RSS -Limited

Restore Factory Defaults



WFFD9A9

Restore theFactory Defaults of RSS -Limited

Enable/DisableRSS -Limited



W081B08

****Enable RSS -Limited**



W081B00

Disable RSS -Limited

Transmit Application Identifier "01"



W201B20

****Transmit Application Identifier "01"**



W201B00

Do NotTransmit Application Identifier "01"

RSS -Expand

Restore Factory Defaults



Restore theFactory Defaults of RSS -Expand

Enable/Disable RSS -Expand



****Enable RSS -Expand**



Disable RSS -Expand

2D Symbologies

PDF417

Restore Factory Defaults



WFFD9B0

Restore the Factory Defaults ofPDF417

Enable/DisablePDF417



W010C01

****Enable PDF417**



W010C00

Disable PDF417

Data Matrix

Restore Factory Defaults



WFFD9B1

Restore theFactory Defaults ofData Matrix

Enable/DisableData Matrix



W080C08

****Enable Data Matrix**



W080C00

Disable Data Matrix

Rectangular Barcodes



W034B03

****Decode Rectangular Barcodes**



W034B00

Do Not Decode Rectangular Barcodes

Mirror Images



****Decode UnmirroredDMOnly**



Decode Mirrored DMOnly



Decode Both

QR Code

Restore Factory Defaults



Restore theFactory Defaults ofQR Code

Enable/DisableQR Code



****Enable QR Code**



Disable QR Code

Micro QR



****Enable Micro QR**



Disable Micro QR

Mirrored Micro QR



Decode MirroredMicro QR



**Do Not Decode MirroredMicro QR

Appendix

AppendixA: Factory Defaults Table

Parameter	Factory Default	Remark
Programming Barcode		
Barcode Programming	Enabled	
Programming Barcode Data	Do not send	If Send Programming Barcode Data is enabled, barcode programming will be disabled.
Communication Interfaces		
TTL232 Interface	Baud Rate	9600
	Parity Check	None
	Number ofData Bits	8
	Number ofStop Bits	1
	Hardware Flow Control	None
USB Interface		USB DATAPIPE Other options: USB HIDKBW, USB COM Port Emulation, HIDPOS.
USB HIDKBW	Input Mode	Standard Keyboard
	USB Country Keyboard Type	U.S.
	Beep on Unknown Character	Enabled
	InterKeystroke Delay	No delay
	Caps Lock	Disabled
	Convert Case	No conversion
	Emulate Numeric Keypad	Disabled
Scan Mode		
Scan Mode	Manual mode	Other options: Continuous Mode, Sense Mode, Command Trigger Mode.

Continuous Mode	Decode Session Timeout	5.0s	0.1-25.5s; 0: infinite.
	Timeout between Decodes	1.0s	0-25.5s
Sense Mode	Decode Session Timeout	5.0s	0.1-25.5s; 0: infinite.
	Timeout between Decodes	1.0s	0-25.5s
	Image Stabilization Timeout	0.4s	0-25.5s
	Sensitivity	Medium	
Command Trigger Mode	Decode Session Timeout	5.0s	0.1-25.5s; 0: infinite.
Illumination & Aiming			
Illumination	Normal	Turn on when scanning barcode	
Aiming	Normal	Turn on when scanning barcode	
Notification			
Mute Mode	Disabled		
Good Read Beep	Beep on Good Read	Enabled	
	Beep Frequency	Medium	
	Beep Duration	80ms	Other options: 40ms, 120ms.
Decode Result Notification	Disabled	“S”: Good read; “F”: No read.	
Data Formatting			
AIM ID Prefix	Disabled		
Code ID Prefix	Disabled		
Code ID Type	Original Code ID		
Terminating Character Suffix	Disabled	Terminating character options: CR, CRLF, TAB.	

Parameter	Factory Default	Remark
Symbolologies		
Video Reverse	Disabled	Applicable to all symbologies.
Code 128		
Code 128	Enabled	
UCC/EAN-128 (GS1-128)		
UCC/EAN128	Enabled	
AIM 128		
AIM 128	Enabled	
EAN-8		
EAN-8	Enabled	
Check Digit	Transmit	
2-DigitAdd-On Code	Disabled	
5-DigitAdd-On Code	Disabled	
Add-On Code	Not required	
Extend toEAN-13	Disabled	
EAN-13		
EAN-13	Enabled	
Check Digit	Transmit	
2-DigitAdd-On Code	Disabled	
5-DigitAdd-On Code	Disabled	
Add-On Code	Not required	
ISSN		
ISSN	Disabled	
ISBN		
ISBN	Enabled	
ISBN Format	ISBN-13	

Parameter	Factory Default	Remark
UPC-E		
UPC-E	Enabled	
Check Digit	Transmit	
2-DigitAdd-On Code	Disabled	
5-DigitAdd-On Code	Disabled	
Add-On Code	Not required	
Extend toUPC-A	Disabled	
System Character“0”	Do not transmit	
UPC-A		
UPC-A	Enabled	
Check Digit	Transmit	
2-DigitAdd-On Code	Disabled	
5-DigitAdd-On Code	Disabled	
Add-On Code	Not required	
Preamble Character“0”	Do not transmit	
Interleaved 2 of 5		
Interleaved 2 of 5	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Appended“0”	Transmit	For Interleaved 2 of 5 barcodes that contain an odd number of characters
ITF-6		
ITF-6	Disabled	
Check Digit	Do not transmit	
ITF-14		
ITF-14	Enabled	
Check Digit	Transmit	
Matrix 2 of 5		
Matrix 2 of 5	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	

Parameter	Factory Default	Remark
Industrial 25		
Industrial 25	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Standard 25		
Standard 25	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Code 39		
Code 39	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Start/Stop Character	Do not transmit	
Code 39 FullASCII	Disabled	
Codabar		
Codabar	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Start/Stop Character	Transmit	
Start/Stop Character Format	ABCD/ABCD	
Code 93		
Code 93	Enabled	
Check Digit Verification	Enabled	
Check Digit	Do not transmit	
Code 11		
Code 11	Enabled	
Check Digit Verification	One check digit, MOD11	
Check Digit	Transmit	

Parameter	Factory Default	Remark
Plessey		
Plessey	Enabled	
Check Digit Verification	Enabled	
Check Digit	Do not transmit	
MSI-Plessey		
MSI-Plessey	Enabled	
Check Digit Verification	One check digit, MOD10	
Check Digit	Transmit	
RSS -14		
RSS -14	Enabled	
AI (Application Identifier)	Transmit	
RSS -Limited		
RSS -Limited	Enabled	
AI (Application Identifier)	Transmit	
RSS -Expand		
RSS -Expand	Enabled	
PDF417		
PDF417	Enabled	
Data Matrix		
Data Matrix	Enabled	
RectangularBarcodes	Decode	
Mirror Images	Decode unmirrored DM only	
QR Code		
QR Code	Enabled	
Micro QR	Enabled	
Mirrored Micro QR	Do not decode	

AppendixB: AIM IDTable

Symbology	AIM ID	Remark
Code 128]C0	Standard Code 128
UCC/EAN 128 (GS1-128)]C1	FNC1 is the character right after the start character
AIM 128]C2	FNC1 is the 2nd character after the start character
EAN-8]E4	Standard EAN-8
]E4….]E1…]	EAN-8 + 2Digit AddOn Code
]E4….]E2…]	EAN-8 + 5Digit AddOn Code
EAN-13]E0	Standard EAN-13
]E3	EAN-13 + 2/5Digit AddOn Code
ISSN]X5	Standard ISSN
ISBN]X4	Standard ISBN
UPC-E]E0	Standard UPC-E
]E3	UPC-E + 2/5Digit AddOn Code
UPC-A]E0	Standard UPC-A
]E3	UPC-A + 2/5Digit AddOn Code
Interleaved 2 of 5]I0	No check digit verification
]I1	Transmit check digit after verification
]I3	Do not transmit check digit after verification
ITF-6]I1	Transmit check digit
]I3	Do not transmit check digit
ITF-14]I1	Transmit check digit
]I3	Do not transmit check digit
Matrix 2 of 5]X1	No checkdigit verification
]X2	Transmit check digit after verification
]X3	Do not transmit check digit after verification
Industrial 25]S0	Not specified
Standard 25]R0	No checkdigit verification
]R8	One check digit MOD 7; do not transmit check digit
]R9	One check digit MOD 7; transmit check digit

Symbology	AIM ID	Remark
Code 39]A0	Transmit barcodes as is; Full ASCII disabled; nocheck digit verification
]A1	One check digit MOD 43; transmit check digit
]A3	One check digit MOD 43; do not transmit check digit
]A4	Full ASCII enabled; nocheck digit verification
]A5	Full ASCII enabled MOD43; transmit check digit
]A7	Full ASCII enabled; MOD43; do not transmit check digit
Codabar]F0	Standard Codabar
]F2	Transmit check digit after verification
]F4	Do not transmit check digit after verification
Code 93]G0	Not specified
Code 11]H0	One check digit MOD11; transmit check digit
]H1	Two check digits, MOD11/MOD11 transmit check digit
]H3	Do not transmit check digit after verification
]H8	Two check digits MOD11/MOD9 transmit check digit
]H9	No check digit verification
Plessey]P0	Not specified
MSI Plessey]M0	One check digit MOD10; transmit check digit
]M1	One check digit MOD10; do not transmit check digit
]M7	Two check digits, MOD10 /MOD11 do not transmit check digit
]M8	Two check digits MOD10 /MOD11 transmit check digit
]M9	No check digit verification
RSS -14/RSS-Limited RSS-Expand]e0	
PDF417]L0	Comply with 1994 PDF417 specifications
Data Matrix]d0	ECC 000-140
]d1	ECC 200
]d2	ECC 200; FNC1 is the 1st or 5th character after the start character
]d3	ECC 200; FNC1 is the 2nd or 6th character after the start character
]d4	ECC 200, ECI protocols supported
]d5	ECC 200; FNC1 is the 1st or 5th character after the start character;

Symbology	AIM ID	Remark
QR Code		ECI supported
]d6	ECC 200; FNC1 is the 2nd or 6th character after the start character; ECI supported
]Q0	QR1 (comply with AIM ISS 97001 specifications)
]Q1	QR2 (2005 symbol), ECI protocol not supported
]Q2	QR2 (2005 symbol), ECI protocol supported
]Q3	QR2 (2005 symbol), ECI protocol not supported; FNC1 is the character right after the start character
]Q4	QR2 (2005 symbol), ECI protocol supported; FNC1 is the character right after the start character
]Q5	QR2 (2005 symbol), ECI protocol not supported; FNC1 is the 2nd character right after the start character
]Q6	QR2 (2005 symbol), ECI protocol supported; FNC1 is the 2nd character right after the start character

Reference: ISO/IEC 15424:2008 Information technology—Automatic identification and data capture techniques Data Carrier Identifiers (including Symbology Identifiers)

AppendixC: Code ID Table

Symbology	OriginalCode ID	VisibleCode ID
Code 128 FNC3	1	A(0x41)
Code 128	2	B(0x42)
UCC/EAN 128	3	C(0x43)
EAN-8	4	D(0x44)
EAN-13	5	E(0x45)
UPC-E	6	F(0x46)
UPC-A	7	G(0x47)
Interleaved 2 of 5	8	H(0x48)
ITF-14	9	I(0x49)
ITF-6	10	J(0x4A)
Code 39	13	M(0x4D)
Codabar	15	O(0x4F)
Standard 25	16	P(0x50)
Code 93	17	Q(0x51)
AIM 128	21	U(0x55)
MSI Plessey	22	V(0x56)
ISBN	23	W(0x57)
Industrial 25	24	X(0x58)
Matrix 2 of 5	25	Y(0x59)
RSS-14	26	Z(0x5A)
RSS Limited	27	[(0x5B)
RSS Expand	28	\ (0x5C)
Code 11	29] (0x5D)
Plessey	30	^ (0x5E)
ISSN	31	_ (0x5F)
PDF417	32	` (0x60)
QR	33	a (0x61)
Data Matrix	35	c (0x63)

AppendixD: ASCII Table

Hex	Dec	Char	
00	0	NUL	(Nullchar.)
01	1	SOH	(Startof Header)
02	2	STX	(Startof Text)
03	3	ETX	(End of Text)
04	4	EOT	(End of Transmission)
05	5	ENQ	(Enquiry)
06	6	ACK	(Acknowledgment)
07	7	BEL	(Bell)
08	8	BS	(Backspace)
09	9	HT	(HorizontalTab)
0a	10	LF	(LineFeed)
0b	11	VT	(VerticalTab)
0c	12	FF	(FormFeed)
0d	13	CR	(CarriageReturn)
0e	14	SO	(ShiftOut)
0f	15	SI	(ShiftIn)
10	16	DLE	(Data LinkEscape)
11	17	DC1	(XON) (DeviceControl1)
12	18	DC2	(DeviceControl2)
13	19	DC3	(XOFF) (DeviceControl3)
14	20	DC4	(DeviceControl4)
15	21	NAK	(NegativeAcknowledegment)
16	22	SYN	(Synchronousidle)
17	23	ETB	(End of Trans. Block)
18	24	CAN	(Cancel)
19	25	EM	(End of Medium)
1a	26	SUB	(Substitute)
1b	27	ESC	(Escape)
1c	28	FS	(FileSeparator)
1d	29	GS	(Group Separator)

Hex	Dec	Char	
1e	30	RS	(Request to Send)
1f	31	US	(Unit Separator)
20	32	SP	(Space)
21	33	!	(Exclamation Mark)
22	34	"	(Double Quote)
23	35	#	(Number Sign)
24	36	\$	(Dollar Sign)
25	37	%	(Percent)
26	38	&	(Ampersand)
27	39	'	(Single Quote)
28	40	((Right/ Closing Parenthesis)
29	41)	(Right/ Closing Parenthesis)
2a	42	*	(Asterisk)
2b	43	+	(Plus)
2c	44	,	(Comma)
2d	45	-	(Minus / Dash)
2e	46	.	(Dot)
2f	47	/	(Forward Slash)
30	48	0	
31	49	1	
32	50	2	
33	51	3	
34	52	4	
35	53	5	
36	54	6	
37	55	7	
38	56	8	
39	57	9	
3a	58	:	(Colon)
3b	59	;	(Semi-colon)
3c	60	<	(Less Than)
3d	61	=	(Equal Sign)

Hex	Dec	Char	
3e	62	>	(Greater Than)
3f	63	?	(Question Mark)
40	64	@	(AT Symbol)
41	65	A	
42	66	B	
43	67	C	
44	68	D	
45	69	E	
46	70	F	
47	71	G	
48	72	H	
49	73	I	
4a	74	J	
4b	75	K	
4c	76	L	
4d	77	M	
4e	78	N	
4f	79	O	
50	80	P	
51	81	Q	
52	82	R	
53	83	S	
54	84	T	
55	85	U	
56	86	V	
57	87	W	
58	88	X	
59	89	Y	
5a	90	Z	
5b	91	[(Left / Opening Bracket)
5c	92	\	(Back Slash)
5d	93]	(Right / Closing Bracket)

Hex	Dec	Char	
5e	94	^	(Caret / Circumflex)
5f	95	_	(Underscore)
60	96	'	(Grave Accent)
61	97	A	
62	98	B	
63	99	C	
64	100	d	
65	101	e	
66	102	f	
67	103	g	
68	104	h	
69	105	i	
6a	106	j	
6b	107	k	
6c	108	l	
6d	109	m	
6e	110	n	
6f	111	o	
70	112	p	
71	113	q	
72	114	r	
73	115	s	
74	116	t	
75	117	u	
76	118	v	
77	119	w	
78	120	x	
79	121	y	
7a	122	z	
7b	123	{	(Left/ Opening Brace)
7c	124		(Vertical Bar)
7d	125	}	(Right/Closing Brace)
7e	126	~	(Tilde)
7f	127	DEL	(Delete)

AppendixE: Parameter Programming Examples

The following examples show you how to program parameters by scanning programming barcodes.

Program the Decode Session Timeout

Example: Set the decode session timeout to 5.0s

1. Scan the **Decode Session Timeout** barcode.
2. Scan the numeric barcode “5” and “0”.
3. Scan the **Save** barcode.

Program the Timeout between Decodes

Example: Set the timeout between decodes to 5.0s

1. Scan the **Timeout between Decodes** barcode.
2. Scan the numeric barcode “5” and “0”.
3. Scan the **Save** barcode.

Program the Image Stabilization Timeout

Example: Set the image stabilization timeout to 5.0s

1. Scan the **Image Stabilization Timeout** barcode.
2. Scan the numeric barcode “5” and “0”.
3. Scan the **Save** barcode.

Program the Sensitivity Level

Example: Set the sensitivity level to 5

1. Scan the **Custom Sensitivity** barcode.
2. Scan the numeric barcode “5”
3. Scan the **Save** barcode.

AppendixF: Digit Barcodes

0 ~5



D000000

0



D000001

1



D000002

2



D000003

3



D000004

4



D000005

5

6~9



6



7



8



9

A ~ F



D00000A

A



D00000B

B



D00000C

C



D00000D

D



D00000E

E



D00000F

F

AppendixG: Save/Cancel Barcodes

After reading numeric barcode(s), you need to scan the **Save** barcode to save the data. If you scan the wrong digit(s), you can either scan the **Cancel the Last Digit** barcode and then the correct digit, or scan the **Cancel All Digits** barcode and then the digits you want.

For instance, after reading the **Decode Session Timeout** barcode and numeric barcodes “1”, “2” and “3”, you scan:

Cancel the Last Digit: The last digit “3” will be removed.

Cancel All Digits: All digits “123” will be removed.



Save



Cancel the Last Digit



Cancel All Digits

AppendixH: FrequentlyUsed Serial Commands

Feature	Serial Command
Set baud rate to 9600	7E 00 08 01 00 D9 D3 20 38
Set baud rate to 115200	7E 00 08 01 00 D9 D8 91 53
Save register data in EEPROM	7E 00 09 01 00 00 DE C8
Query the baud rate	7E 00 07 01 00 2A 02 D8 0F

After receiving the Query Baud Rate serial command, the engine may respond with one of the following messages.

Message	Baud Rate
02 00 00 02 C4 09 SS SS	1200
02 00 00 02 E2 04 SS SS	2400
02 00 00 02 71 02 SS SS	4800
02 00 00 02 39 01 SS SS	9600
02 00 00 02 D0 00 SSSS	14400
02 00 00 02 9C 00 SS SS	19200
02 00 00 02 4E 00 SS SS	38400
02 00 00 02 34 00 SS SS	57600
02 00 00 02 1A 00 SS SS	115200

Note:SS SS: CRC-CCITT checksum.
